

---

# BATTERY PLUG INSTRUCTIONS

---

## APPLICATION

When Pocket Record™ is unplugged from a MIDI line, it retains its memory for 4 hours without power or batteries. Anatek's **BATTERY PLUG** provides memory back-up for more than a year. A 3-Volt lithium battery is included for your convenience.

## INSTRUCTIONS

1. Unscrew the cap of the **BATTERY PLUG** in a counter-clockwise direction.
2. Place battery face down with the positive (+) side up.
3. Place rubber spacer on top of battery.
4. Replace the cap of the **BATTERY PLUG** by turning it in a clock-wise direction. Do not over-tighten. Never insert or replace the battery while the **BATTERY PLUG** is inserted into Pocket Record™. This can cause undue stress on the plug or unit, and damage may result.
5. By placing the **BATTERY PLUG** into Pocket Record's™ **OUTPUT**, the sequence data will be retained for more than a year.

**NOTE:** If the **BATTERY PLUG** is removed from Pocket Record™, its memory will be retained for approximately 2 HOURS. If Pocket Record™ is removed from a MIDI line, the memory is retained for 4 HOURS without power or batteries.

**BATTERY LIFE:** In normal applications, the battery should provide well over a year of service; however, to ensure data integrity, it is recommended that the battery be replaced **ONCE A YEAR**. Replace battery with type CR2032 or equivalent.

**ANATEK MICROCIRCUITS INC.**  
**Music Products Division**  
**400 Brooksbank Avenue**  
**North Vancouver, B.C. Canada V7J 1G9**

*PRINTED IN CANADA*