


iPod mini Quick Reference

Using iPod mini Controls

Use the iPod mini Click Wheel and Select button (in the center) to navigate through onscreen menus, play songs, change settings, and view information. Move your thumb lightly around the Click Wheel to scroll to a menu item. Press the Select button to select the item. Press Menu on the Click Wheel to go back to the previous menu.

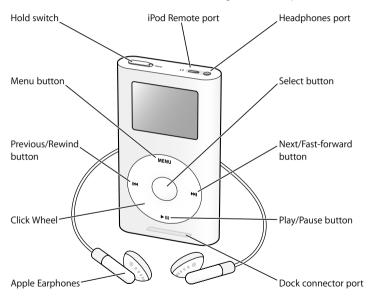

Toggle the Hold switch (set it to hold, then turn it off again). Then press the Menu and Select buttons simultaneously for about 6 seconds, until the Apple logo appears.
Press the Select button.
Press and hold Play/Pause.
Press and hold Menu or select Backlight from the main menu.
Scroll to the item and press the Select button.
Press Menu.
Select Playlists or Browse from the main menu.
Highlight the song and press the Select or Play/Pause button.
Highlight the list title (an album title, or the title of a playlist, for example) and press Play/Pause.
From the Now Playing screen, use the Click Wheel. You can also use the optional iPod Remote (available at www.apple.com/store) from any screen.
Press Play/Pause when no song or list is highlighted.
Set the Hold switch to hold (an orange bar appears).

iPod mini Controls	
Skip to any point in a song	From the Now Playing screen, press the Select button. Then scroll to any point in the song.
Skip to the next song	Press Next/Fast-forward.
Start a song over	Press Previous/Rewind.
Play the previous song	Press Previous/Rewind twice.
Fast-forward	Press and hold Next/Fast-forward.
Rewind	Press and hold Previous/Rewind.

Tutorial

For an in-depth tutorial on transferring music to and playing music on iPod mini, see the *iPod mini Tutorial* on the iPod mini CD.

Printed in XXXX 034-2428-A

^{© 2004} Apple Computer, Inc. All rights reserved.

Apple and the Apple logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. iPod is a trademark of Apple Computer, Inc.