


# AVIOM®

## Quick Reference

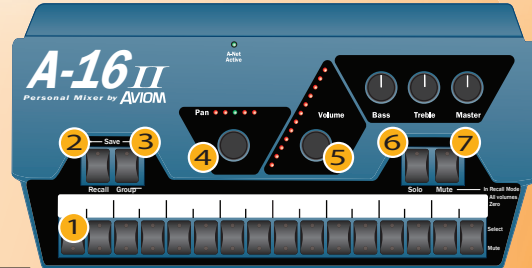

### **Mixing:**

- Select a channel by pressing a numbered channel button. ①
- Adjust the volume by turning the Volume knob. ⑤
- Change the pan by turning the Pan knob. ④

### **Saving a Mix Preset:**

- Press and hold the Recall ② and Group ③ buttons; then press any channel button. Flashing lights verify the save operation.

### **Recalling a Mix Preset:**

- Press the Recall button; ② then select a channel button.

PRO™  
16

# AVIOM®

## Muting a Channel:

- Select a channel by pressing a numbered channel button. ①
- Press the Mute button. ⑦ Press Mute again to un-mute a channel.

## To Solo a Channel:

- Select a channel. ①
- Press the Solo button. ⑥ Pressing any button exits solo mode.


## Grouping Channels:

- Press the Group button. ③
- Press a channel button. ①
- Double-click to add channels to a Group.

## To Recall the Default Factory Preset:

(a good way to start a mix)

- Press the Recall button. ②
- Press the Mute button. ⑦

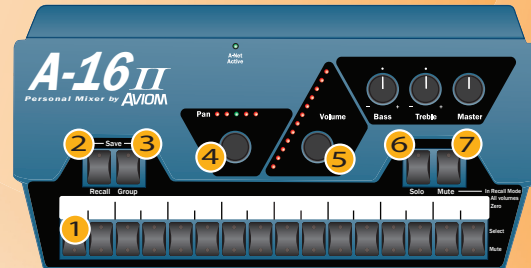

[www.Aviom.com](http://www.Aviom.com) | Tel: 610-738-9005 | E-mail: [Info@aviom.com](mailto:Info@aviom.com)

PN:93.1110.090001F  
©2006 Aviom, Inc.  
Aviom, A-Net, and Pro 16 are trademarks of Aviom, Inc.