


Control elements

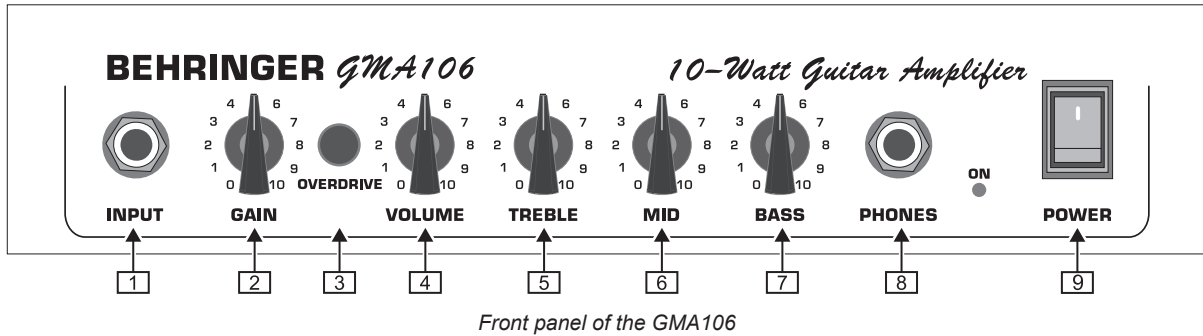

- 1 INPUT: Connect your guitar to this 1/4" TS input jack.
 - 2 GAIN: Adjusts the pre gain, and controls the amount of distortion when Overdrive is active.
 - 3 OVERDRIVE: Activates the Overdrive function, which boosts the gain and increases distortion.
 - 4 VOLUME: Controls the overall volume of the amp.
 - 5 TREBLE: Controls the high-frequency range of the guitar signal.
 - 6 MID: Controls the mid-frequency range of the guitar signal.
 - 7 BASS: Controls the low-frequency range of the guitar signal.
 - 8 PHONES: Connect your headphones to this 1/4" TRS output jack. The speakers will automatically be muted.
 - 9 POWER: Powers up your amplifier. The POWER switch should always be in the "Off" position before you connect the amplifier to the main power source.
- Please note: The POWER switch does not fully disconnect the unit from the power supply. To disconnect the unit from the main power source, pull out the main cord plug or appliance coupler. When installing the product, ensure the plug or appliance coupler is readily operable. Unplug the power cord when the unit is not used for prolonged periods of time.**

Warranty

For our current warranty terms, please refer to our website at <http://www.behringer.com>.

Specifications

Output power	10 W (RMS)	
Loudspeaker	6.5", 8 Ω	
AC Power	U.S./Canada	120 V~, 60 Hz
	China	220 V~, 50 Hz
	Korea	220 V~, 60 Hz
	Europe/U.K./Australia	230 V~, 50 Hz
	Japan	100 V~, 50/60 Hz
	General export model	120/230 V~, 50/60 Hz
Power consumption	13 W	
Dimensions (H x W x D)	approx. 280 mm (11") x 285 mm (11 1/5") x 180 mm (7")	

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may therefore differ from those listed or shown.

- The sound quality may diminish within the range of powerful broadcasting stations and high-frequency sources. Increase the distance between the transmitter and the device and use shielded cables for all connections.**

WARNING!

- We would like to bring to your attention the fact that extremely loud sound levels may damage your hearing as well as your headphones. Please turn the VOLUME control all the way to the left before powering up the unit. Keep the volume at an appropriate level at all times.**

GUITAR AMPLIFIER GMA106

Important Safety Instructions






This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

Caution

-  To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside. Refer servicing to qualified personnel.
-  To reduce the risk of fire or electric shock, do not expose this appliance to rain and moisture. The apparatus shall not be exposed to dripping or splashing liquids and no objects filled with liquids, such as vases, shall be placed on the apparatus.
-  These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions. Repairs have to be performed by qualified service personnel.

WARNING

THIS EQUIPMENT IS CAPABLE OF DELIVERING SOUND PRESSURE LEVELS IN EXCESS OF 90 dB, WHICH MAY CAUSE PERMANENT HEARING DAMAGE.



- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Place the power cord so that it is protected from being walked on and sharp edges. Be sure that the power cord is protected particularly at plugs, convenience receptacles and the point where it exits from the apparatus.
- 11) The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 12) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 13) Only use attachments/accessories specified by the manufacturer.
- 14) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 15) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 16) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.