


ProKeys Sono 61

C1	D1	E1	F1	G1	A1	B1	C2	D2	E2	F2	G2	A2	B2	C3	D3	E3	F3	G3	A3	B3	C4	D4	E4	F4	G4	A4	B4	C5	D5	E5	F5	G5	A5	B5	C6		
Mon Input Rec	USB Rec	Vel Curve = LOW	Vel Curve = MID	Vel Curve = HI	Data = Octave	Data = Transpose	Data = Program	Data = Bank LSB	Data = Bank MSB	Data = Channel	Data = Tuning	Panic	MIDI Out	Local On/Off	Octave -	Octave +	Wheel Assign	Pedal Assign	Knob Assign	Transpose -	Transpose +	Program	Bank LSB	Bank MSB	ENTER												
					Cancel	Ch 1	Ch 2	Ch 3	Ch 4	Ch 5	Ch 6	Ch 7	Ch 8	Ch 9	Ch 10	Ch 11	Ch 12	Ch 13	Ch 14	Ch 15	Ch 16	Default	0	1	2	3	4	5	6	7	8	9					

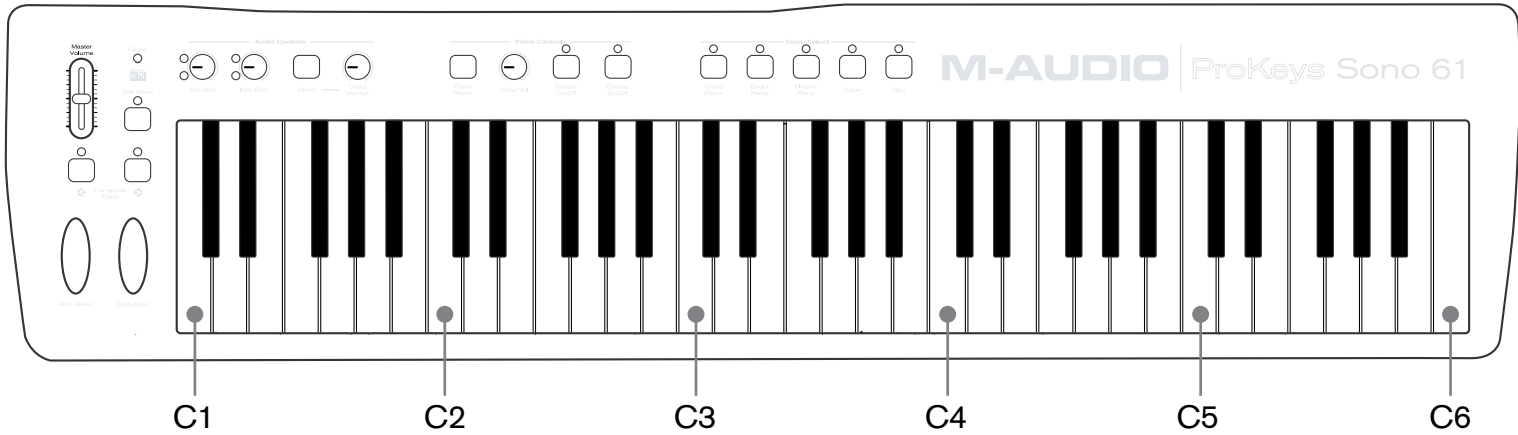

Select **"Fit to Page"** in the print preferences, or your printer's equivalent setting for this feature, before printing this document.