

Record Your Performance and Create a CD

The CD-2e makes it easy to capture your performances and write them to an audio CD. In Section 1, we'll show you how to use the CD-2e's built-in microphone to record a performance to an SD memory card. Then, in Section 2, we'll show you how to write your recorded performance onto a CD.

Section


1 Let's Record to an SD Memory Card

Media to Prepare



SD memory card

1 Connect the included power cord to the dedicated AC adaptor.

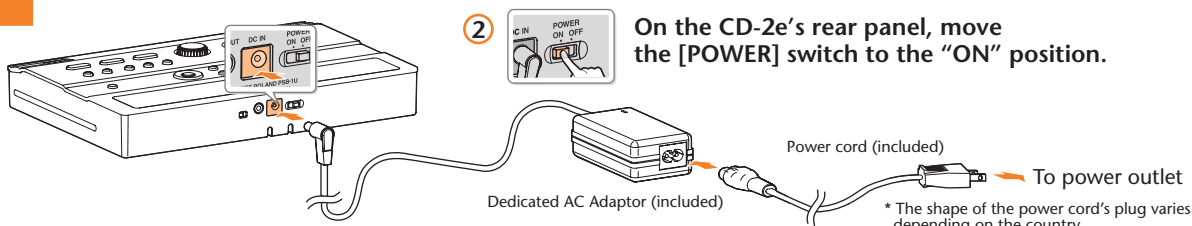


2 Insert the SD memory card into the card slot on the left side panel.


(An SD memory card is included in the CD-2e box.)

Firmly insert the card all the way.

When the CD-2e recognizes the card, the following screen is displayed:

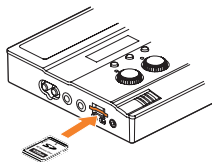

5 Press the [● (Record)] button.

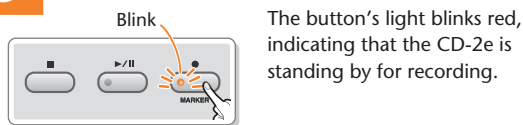


6 Press the [▶/II (Play)] button.



3 Set the two switches on the left side.


1 Set the [MIC SELECT] switch to the "INT" position.

2 Set the [MIC LEVEL] knob to the "MANUAL" position.

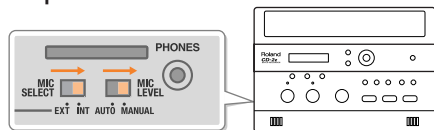


4 While producing the sound that you'll actually be recording, turn the [MIC] knob to adjust the input level.

Adjust the level so that the peak indicator located above the [MIC] knob lights briefly at the loudest moments of the performance or vocal you'll be recording.

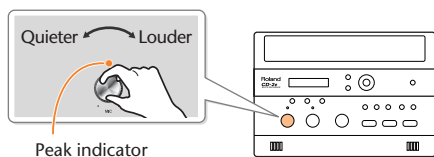

7 Press the [■ (Stop)] button.

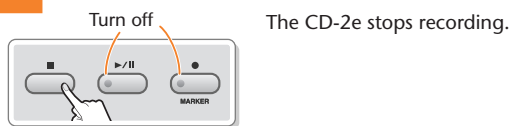

Let's listen to the recorded performance

1 Press the [◀◀] [▶▶] buttons to select the desired song.

2 Press the [▶/II (Play)] [■ (Stop)] buttons to start and stop playback.

* To record additional performances, repeat Steps 4-7.

Once you've finished recording, proceed to the other side of this sheet to learn how to write a CD. ▶▶▶

• For additional details on recording using the built-in microphone, see page 36 of the CD-2e Owner's Manual.

Section

2 Let's Create a CD

Media to Prepare




Blank CD-R disc

1 Press the [MENU] button to access the menu screen, and choose "Write (SD→CD)?"

- ① Press the [MENU] button to access the menu screen.
- ② Use the [◀] [▶] buttons to choose "Write (SD → CD)?"
- ③ Press the [ENTER] button to confirm your choice.




CD-R/RW
Write(SD→CD)?

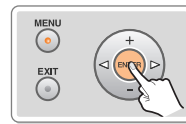

2 As the screen instructs, insert the CD into the CD slot located on the right side panel.

Write(SD→CD)
Insert Disc

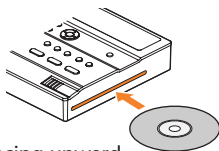

Insert the CD with its label surface facing upward.

3 When you see this screen, press the [ENTER] button.

Write All Tracks
Are You Sure?



- * If you're using the included SD memory card, the sample songs it contains will also be written onto the CD.
- * You can also select the songs to be written. For details on how to do this, see page 79 in the CD-2e Owner's Manual.

4 If you're sure you want to proceed, press the [ENTER] button.

Write(SD→CD)
Are You Sure?



5 When the FINALIZE screen appears, press the [ENTER] button.

Finalize
:Yes



6 If you're sure you want to proceed, press the [ENTER] button.

Finalize
Are You Sure?



Write(SD→CD) 1/1
Processing.. 12%

The CD-2e begins writing a CD. Please wait.

7 The disc will be ejected automatically when CD writing is completed.

Write Completed
Another Disc?

When you see this screen, press the [EXIT] button to end the procedure.

Now you have a CD of your performance!!

Let's listen to your CD

- ① Insert the CD into the CD slot.
When the CD-2e recognizes the CD-R disc as an audio CD, the following screen is displayed:

CD 01 00:00

"CD" appears on the left side of the screen.

- ② Press the [▶/II (Play)] [■ (Stop)] buttons to start and stop playback.



* 0 4 8 9 2 5 4 5 - 0 1 *