


# **BOSS**

## **DI-1**

### **Direct Box**

## **Instructions**

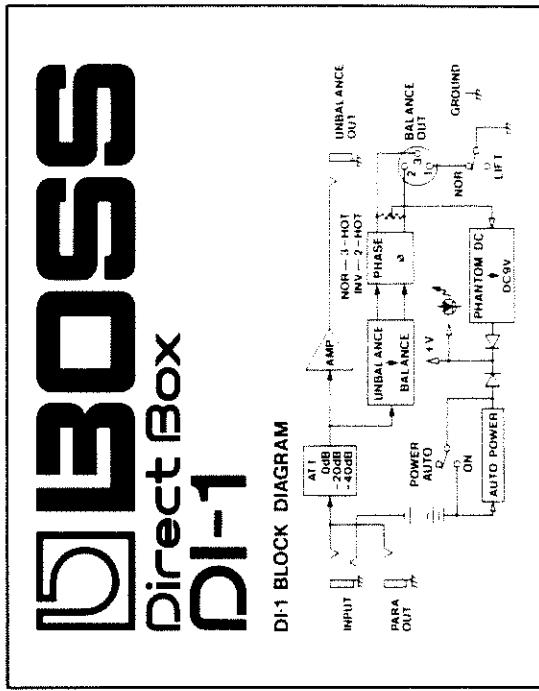


- Please read these instructions carefully.



## Direct Box DI-1

### Connecting

From Unbalanced Output or Parallel Output

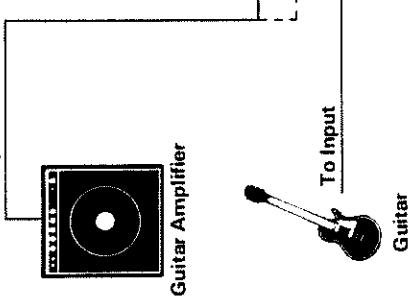

- The BOSS Direct Box DI-1 is the unbalanced to balanced converter which can satisfy even the fussiest professional musician.

- A high impedance instrument such as electric guitar or bass guitar can be directly connected to the DI-1 without causing deterioration of tone quality.

- Featuring Auto Power On/Off circuit, the DI-1 is automatically turned off when signal stops coming in.

- The DI-1 can be power supplied by the mixer or phantom power as well as by usual battery power.

- With the Input Attenuator, wide range of input level can be accepted.

- With the Phase Switch, the polarity of the Balanced Output can be changed.



- The Ground Lift Switch is provided to solve the earth loop effect.

- The Parallel Output Jack sends the input signal in exactly the same shape.

- The DI-1 operates properly even when the first and the second or third pins of the Balanced Output are closed.

- \* If you wish to send the signal from the DI-1 to the guitar amplifier, connect the amplifier to the Unbalanced Output Jack of the DI-1.


### Panel Description

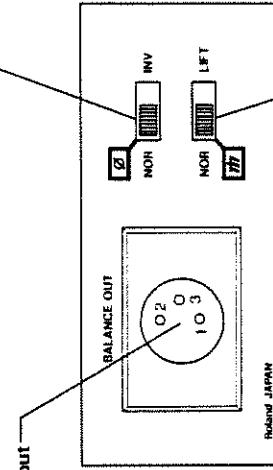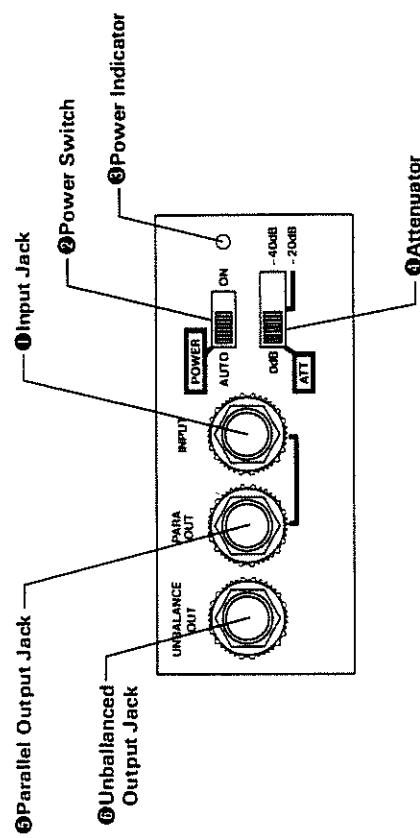

## Direct Box DI-1


- The BOSS Direct Box DI-1 is the unbalanced to balanced converter which can satisfy even the fussiest professional musician.
- A high impedance instrument such as electric guitar or bass guitar can be directly connected to the DI-1 without causing deterioration of tone quality.
- Featuring Auto Power On/Off circuit, the DI-1 is automatically turned off when signal stops coming in.
- The DI-1 can be power supplied by the mixer of phantom power as well as by usual battery power.
- With the Input Attenuator, wide range of input level can be accepted.
- With the Phase Switch, the polarity of the Balanced Output can be changed.
- The Ground Lift Switch is provided to solve the earth loop effect.
- The Parallel Output Jack sends the input signal in exactly the same shape.
- The DI-1 operates properly even when the first and the second(or third) pins of the Balanced Output are closed.

### Connecting From Unbalanced Output or Parallel Output

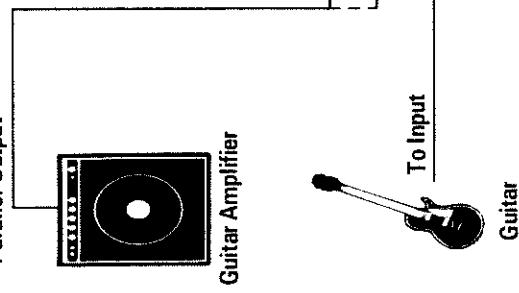


- \* If you wish to send the signal from the DI-1 to the guitar amplifier, connect the amplifier to the Unbalanced Output Jack of the DI-1.

## Battery Replacement

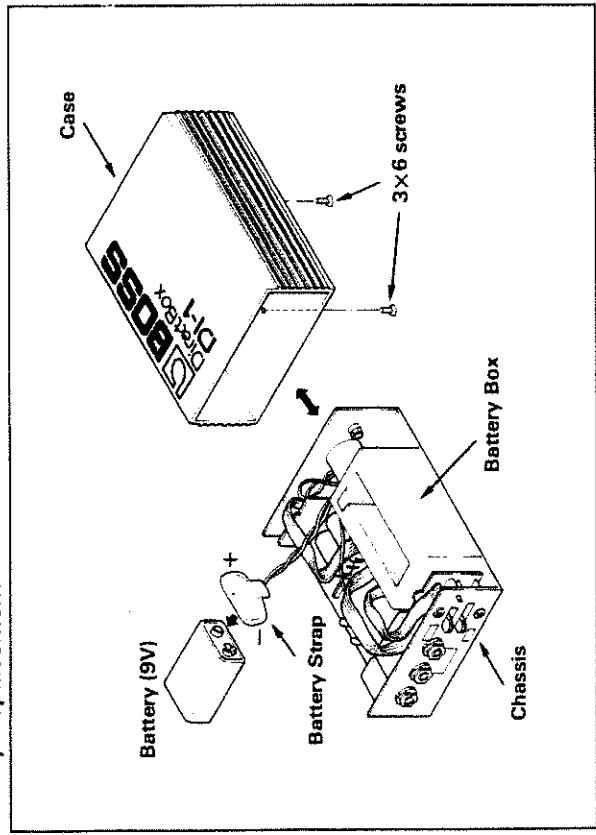

**DI-1 BLOCK DIAGRAM**

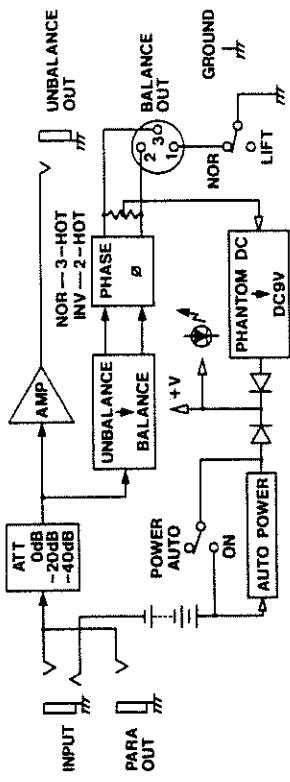

## Specifications

<b>Power</b>	9V DC or Phantom Power 24V to 48V DC ±20dBm/0dBn +4dBm selectable
<b>Rated Input Level</b>	+4.7dBm (1kHz), 390mV P-P
<b>Maximum Input Level</b>	4.7MΩ/3.7A (2.3kΩ corresponding to the attenuator)
<b>Input Impedance Attenuator</b>	-18dBm(Balanced Output) -6dB (A)
<b>Rated Output Level</b>	-20dBm(Unbalanced Output) -50dB
<b>Maximum Output Level</b>	+8dBm(Unbalanced Output) -60dB
<b>Output Load Impedance</b>	+8dBm(Unbalanced Output) -50kΩ over 200Ω (Balanced Output) over 10kΩ (Unbalanced Output) 20Hz to 40kHz +1dB under -11.0dBm (W/A)
<b>Frequency Response</b>	under 0.05%
<b>Residual Noise</b>	Minimum Level for Auto On: -50.0dBm
<b>Total Harmonic Distortion</b>	Auto Off Response: Approx. 15 minutes
<b>Auto Power On/Off</b>	Input, Parallel Output, Balanced Output Connector Unbalanced Output, Power(On/Off), Attenuator(0dB, -20dB, -40dB)
<b>Jacks</b>	Ground (Pin 1/Inv), Phase(Pin 2/Hv), Ground(Ln/Not/Ln) Pin 3 13.16° × 1 13.16° × 1 15° × 1 16°
<b>Switches</b>	480g / 1.1lb (Q2)
<b>Current Draw</b>	96.5W × 46(H) × 125(D) mm
<b>Dimensions</b>	3 13.16° × 1 13.16° × 1 15° × 1 16°
<b>Weight</b>	* Specifications are subject to change without notice.

**BOSS**  
Products of Roland  
Printed in Japan '85 Feb E-3

**Roland®**

**2603069700**

**UPC**

**2603069700**



**10981**

**BOSS**