

## SPD-20 Patch List

No.	Patch Name	Description	No.	Patch Name	Description
1	Drums & Shaker *	Demo Kit	51	Yang Qin	Chinese Struck Stringed Instrument
2	Latin Set *	Demo Kit	52	Southeast Asian	Southeast Asian Percussion
3	Orchestral	Demo Kit	53	Gamelan	Southeast Asian Percussion
4	Groove *	Demo Kit	54	Timpani	Orchestral Percussion
5	Amazon *	Demo Kit	55	Chimes & Bells	Orchestral Percussion
6	Brushes *	Demo Kit	56	Orchestra Hits	Orchestral Percussion
7	Delay	Demo Kit	57	Marimba	Melodic Percussion
8	Dance Chord	Demo Kit	58	Bass Marimba	Melodic Percussion
9	Indian *	Demo Kit	59	Celesta	Melodic Percussion
10	Tex-Mex	Demo Kit	60	Vibraphone	Melodic Percussion
11	Standard 1	Acoustic Drum Kit	61	Xylophone	Melodic Percussion
12	Standard 2	Acoustic Drum Kit	62	Tubular Bells	Melodic Percussion
13	Big Rock	Acoustic Drum Kit	63	Steel Drum	Melodic Percussion
14	Jazz	Acoustic Drum Kit	64	Melodic Gong	Melodic Sound
15	Funk	Acoustic Drum Kit	65	Oriental	Melodic Sound
16	Power	Acoustic Drum Kit	66	Choir	Melodic Sound
17	Rock	Acoustic Drum Kit	67	Choir & Bass	Melodic Sound
18	Electronic	Electronic Drum Kit	68	Strings & Bass	Melodic Sound
19	Vintage Hex	Electronic Drum Kit	69	Brass	Melodic Sound
20	TR-909	Electronic Drum Kit	70	Melodic 1	Melodic Sound
21	TR-808	Electronic Drum Kit	71	Melodic 2	Melodic Sound
22	CR-78/TR-808	Electronic Drum Kit	72	Melodic 3	Melodic Sound
23	Dance Scratch	Electronic Drum Kit	73	Melodic 4	Melodic Sound
24	Dance Mix *	Electronic Drum Kit	74	Whole Tone	Melodic Sound
25	Techno	Electronic Drum Kit	75	One Shot Delay	Sound Effects
26	Techno Beat	Electronic Drum Kit	76	Chorus + Delay	Sound Effects
27	Techno Hit *	Electronic Drum Kit	77	Flanger + Reverb	Sound Effects
28	Hip Hop	Electronic Drum Kit	78	Metal Head	Sound Effects
29	Jungle *	Electronic Drum Kit	79	Chorus Chord	Sound Effects
30	Drums & Synth	Electronic Drum Kit	80	Wack-O	Sound Effects
31	Bongo & Conga	Cuban Percussion	81	Flying	Sound Effects
32	Timbales *	Cuban Percussion	82	Crime Scene	Sound Effects
33	Cabasa & Cuica	Brazilian Percussion	83	Holler	Sound Effects
34	Berimbau *	Brazilian Percussion	84	Voices *	Sound Effects
35	Samba *	Brazilian Percussion	85	Loop Menu *	Sound Effects
36	Tabla Baya	Indian Percussion	86	Reversed Sounds	Sound Effects
37	Pot Drums	Indian Percussion	87	Ambience	Sound Effects
38	Madal & Dholak *	Indian Percussion	88	Deep (Full Set)	Full Set Kit (for Micro Drum Kit)
39	Sitar *	Indian Stringed Instrument	89	Recording (Full Set)	Full Set Kit (for Micro Drum Kit)
40	Santoor	Indian Struck Stringed Instrument	90	Vintage (Full Set)	Full Set Kit (for Micro Drum Kit)
41	Tambura	Indian Stringed Instrument	91	Jazz (Full Set)	Full Set Kit (for Micro Drum Kit)
42	African *	African Percussion	92	Jazz Brushes (Full Set)	Full Set Kit (for Micro Drum Kit)
43	Kalimba	African Percussion	93	Analog (Full Set)	Full Set Kit (for Micro Drum Kit)
44	Balaphone	African Percussion	94	Kit Copy	
45	Darbuka	Percussion	95	Kit Copy	
46	Doholla	Percussion	96	for Patch Expand 1	
47	Hammer Dulcimer	Struck Stringed Instrument	97	for Patch Expand 2	
48	Japanese	Japanese Percussion	98	for Patch Expand 3	
49	Korean	Korean Percussion	99	for Patch Expand 4	
50	Chinese	Chinese Percussion			

\* Patches marked with an asterisk " \* " are made using phrase-loop Instruments.

# CORRECTIONS

We apologize that there are some wrong descriptions in the SPD-20 owner's manual. Please correct as follows.

- **Please correct the following text found on p. 90, beginning at the twelfth and thirteenth lines from the left column.**

(Wrong)

L29 Tambourine 3

L30 Timbale High

(Correct)

L29 Timbale High

L30 Timbale High Rim Shot

- **Please delete the following text found in "Turning the Power Off" on p. 13.**

(Delete)

FOOT SW Jack (p. 41) Patch Shift

- **Please add the following text, beginning at the tenth line on p. 15.**

(Addition)

When using the footswitch as a Hold Pedal, please refer to "Using a Footswitch as a Hold Pedal" on p. 41.

- **Please correct the following text found in "About Phrase Loop" on p. 22, beginning from the third line from the bottom.**

(Wrong)

You cannot play more than one Phrase Loop simultaneously.

(Correct)

You cannot play more than one Phrase Loop on different pads. You can layer two Phrase Loops on one pad and play them simultaneously.

- **Please delete the following text found on p. 41, beginning from the first line from the bottom.**

(Delete)

When the power is turned off this setting is canceled.

- **Please add the following text, beginning from the bottom of p. 41.**

(Addition)

When using the footswitch as a Patch Shift Pedal (p. 15), first turn off the power to the unit, then with the footswitch depressed, turn the power back on. The following message is displayed, and the footswitch is set to function as a Patch Shift Pedal.

SEt Patch Shi Ft PEdAL

The footswitch can function as a "Patch Shift Pedal" or a "Hold Pedal."

Each time the power is turned on with the footswitch in the depressed position, the function is switched between "Patch Shift Pedal" and "Hold Pedal." The footswitch setting is set at the factory to "Patch Shift Pedal."



 
 Roland®

---

**71451578**

UPC

71451578



18981

**Roland**