Quickstart Guide
EUROGRAND

MAIN VOLUME
For adjusting the volume.

SPEAKERS
For switching the loud-speakers on and off.

SONG
Control elements for the internal music sequencer. Can be used to record and play back your own music pieces.

TEMPO/VALUE
The display shows parameter values and menu pages.

SOUND SELECT
Use these 14 buttons to select a sound. You can also select two sounds at the same time.

REVERB
For selecting one of four room effects.

VELOCITY
For adjusting the key velocity from soft to hard.

BRIGHTNESS
For changing the brilliance of the sound.

METRONOME
For starting and stopping the metronome click.

TEMPO/EDIT MODE
The SELECT button selects TEMPO or EDIT mode. Use the ◀ ▶ buttons to adjust the tempo and scroll through the EDIT menus.

VALUE/SONG
Use these two buttons to enter parameter values.

EFFECT
For selecting one of four modulation effects.

TRANSPOSE
For transposing the keyboard up or down, so that difficult scales are easier to play.

DEMO
For switching to DEMO mode.

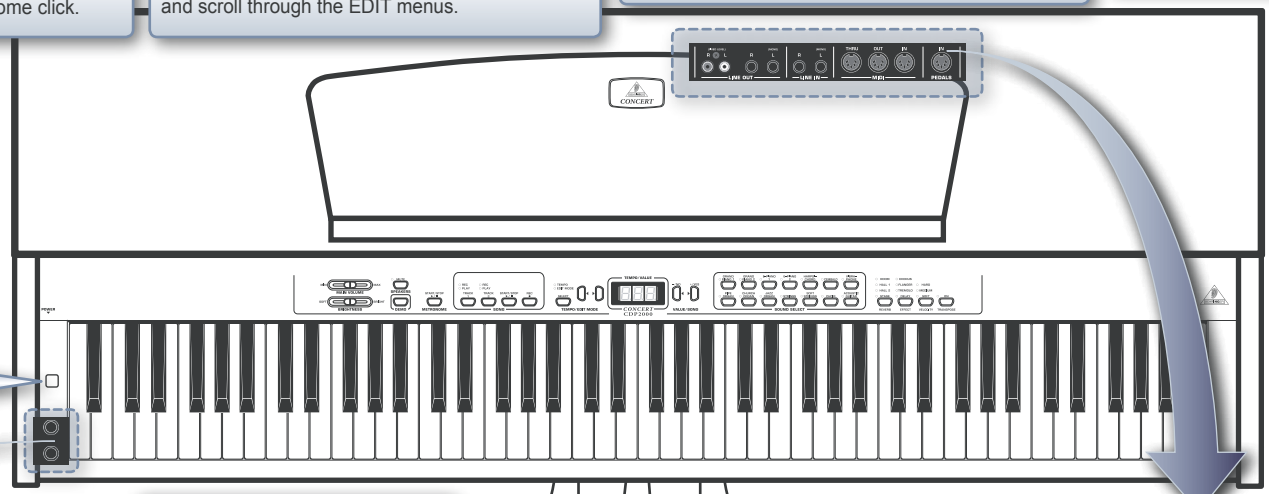

POWER
For switching the piano on and off.

PEDALS
Soft, sostenuto and damper pedal (from left to right).

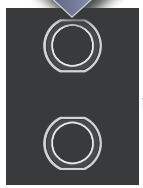

PHONES
Here you can connect two pairs of headphones. This will automatically cut off the built-in loudspeakers.

LINE OUT
Connector for recording devices (e.g. MD recorder) or external amplifiers.

LINE IN
Connector for feeding devices (e.g. CD player) to be played back via the piano's loudspeakers .

MIDI
Connector for external sound modules or music computer.

PEDALS
Connector for the pedal unit of the piano.

A50-64639-00001