Pocket POD®

Pilot's Guide
Manuel de pilotage
Pilotenhandbuch
Pilotenhandboek
Manual del Piloto

LINE 6®

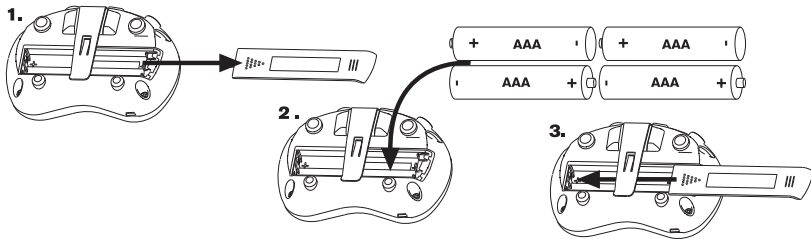## You should read these Important Safety Instructions. Keep these instructions in a safe place.

Before using your Pocket POD, carefully read the applicable items of these operating instructions and the safety suggestions.
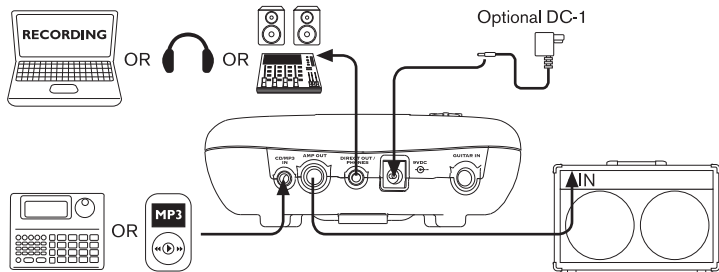
1. Obey all warnings in the Pocket POD Manual.

2. Only use non-rechargeable alkaline batteries or the Line 6 DC-1 power supply.

3. Do not perform service operations beyond those described in the Pocket POD Manual. Service is required when the apparatus has been damaged in any way, such as:

   • liquid has been spilled or objects have fallen into the apparatus
   • the unit has been exposed to rain or moisture
   • the unit does not operate normally or changes in performance in a significant way
   • the unit is dropped or the enclosure is damaged.

4. Do not place near heat sources, such as radiators, heat registers, or appliances which produce heat.

5. Guard against objects or liquids entering the device. Do not use or place unit near water.

6. Do not step on cords. Do not place items on top of cords so that they are pinched or leaned on. Pay particular attention to the cord at the plug end and the point where it connects to the device.

7. Always unplug the guitar cable when not in use for extended periods of time for extended battery life.

8. Clean only with a damp cloth.

9. Only use attachments/accessories specified by the manufacturer.

10. Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening."

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE PURSUANT TO PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
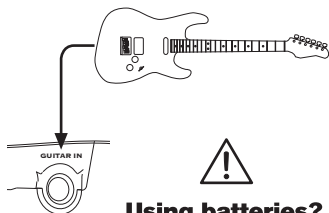
Battery Installation

Hook Up

RECORDING OR 🎧 OR

Optional DC-1

COMP IN   AMP OUT   DIRECT OUT / PHONES   9VDC   GUITAR IN

MP3 OR

IN

Plug In To Turn On

GUITAR IN

⚠️

Using batteries?

| + AAA | + AAA |
| AAA + | AAA + |

Unplug guitar cable when not in use to avoid draining batteries.

Need Lower Volume?

If output is too loud for your headphones or other equipment:

AMP
FX

Master Volume adjust

AMP
FX

SAVE + TAP
Hold

Vol ███████

Selecting Presets

Press ◄ repeatedly, to select browse mode:

BROWSE BY: USER

OR

BROWSE BY: STYLE

OR

BROWSE BY: BAND

FWD →

"BANK 31"
↕
"BANK 01"

"SONG"
↕
"CLEAN"

"BAND 17"
↕
"BAND 01"

FWD →

select next preset

select previous preset

Adjusting Amp Tone

adjust Drive / Channel Volume

DRIVE   EFFECTS MID   DELAY TREBLE   CHAN VOL

adjust Tone

SAVE Hold +

BASS   MID   TREBLE   CHAN VOL REVERB
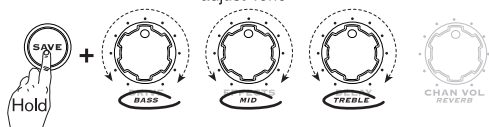
Selecting Amp Models

next Amp Model

SAVE Hold +

previous Amp Model
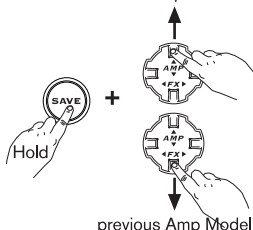
Adjusting Effects

Effects Tweak ← Parameter Tweaked depends on effect loaded.

Delay Level

Delay Rate / Effect Speed
Tap on button

Reverb Level
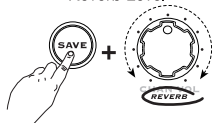
Selecting Effects

SAVE Hold + previous Effect Model ←

→ next Effect Model

Enabling the Noise Gate

SAVE TAP Hold + Gate Off ←

→ Gate On

Using the Built-in Tuner

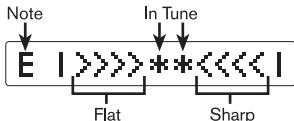TAP activate Tuner - Hold 2 seconds

Pass-through Volume
CHAN VOL / REVERB

Tuner Reference
DELAY / TREBLE
adjusts from 436-445 Hz

Sensitivity
DRIVE / BASS

Note   In Tune

E I >>>> ** <<<< I

Flat   Sharp

TAP Press to exit

5

Saving User Presets

1. Press Save

Press

2. Select User Preset To Replace

Choose a destination
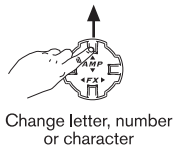(User Preset 01A - 31D)

3. Press Save again

Press

4. Rename User Preset

Select next character of name

Select previous character of name

Change letter, number
or character

5. Press Save again

Press

Cabinet Tuning Mode

By default, the AMP OUT is tuned for ideal sound when connected to the instrument input of an open-back guitar amplifier. If connecting to something else, you can change Cabinet Tuning Mode:
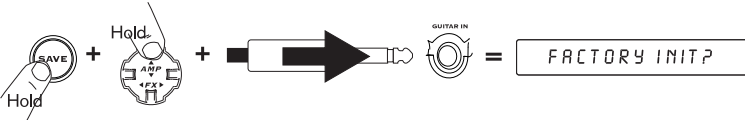
1.

Hold

2. **Direct Mode** No amp or speaker cabs connected (to recording device, mixer, live P.A., etc.)
— **'D' Instr In Clsd** for connecting to guitar combo/head with closed back speaker cabinet
— **'C' Instr In Open** for connecting to guitar combo/head with open back speaker cabinet
— **'B' Pwr Amp Open** for connecting to power amp with an open back speaker cabinet
— **'A' Pwr Amp Clsd** for connecting to power amp with a closed back speaker cabinet

3.
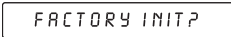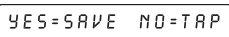
Press

Factory Reset

⚠ **WARNING: All custom USER presets will be lost after a Factory Reset.**

1.

Hold   Hold   `FACTORY INIT?`

2. `YES=SAVE  NO=TAP`

proceed with Reset

Press

OR

Cancel

Press

Connect

No drivers needed!

Computer ← Supplied USB to Mini USB cable

Edit and Share

To fine tune your tones, create original presets from scratch, and build your own personal tone collection, download **Vyzex Pocket POD** editor/librarian software at **www.line6.com/software**. Then visit **www.CustomTone.com** to download any of 5,000+ free Pocket POD-compatible presets, and share your own unique tones with guitarists from around the world.

Register and Get Free Stuff

Included with Pocket POD is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to use in the mail, or register online at **www.line6.com/register**. How come? Well, for one thing, it gets you all set up for warranty service should you have a warranty issue with your Pocket POD. It also gives you unlimited access to the Line 6 online tone library, the tone editing software for Pocket POD, and more online exclusives.

www.line6.com/manuals

Select Pocket POD in our online manual archive to download our online Pocket POD companion manual that describes the details of all the amps and effects featured in your Pocket POD.

LINE 6 CUSTOM TONE
CUSTOM TONE
CUSTOMTONE.COM

LINE 6 ALL ACCESS
Sign up today and get acess to special offers, contests, software updates and more!