

LAMBDA™

QUICK START GUIDE

Lexicon®
by **HARMAN**

PHONE: (801) 566-8800

WEB: lexiconpro.com

SUPPORT: lexiconpro.com/en-US/support

Lambda Quick Start Guide
PN: 5058915-A

© 2016 Harman.

All rights reserved. Lexicon is a registered trademark of Harman.



WHAT'S IN THE BOX

- Lambda Studio™ Recording Interface
- Cubase® LE & Lexicon® MPX-i Plug-in License Card
- USB Cable

PRODUCT REGISTRATION

Register your product at http://lexiconpro.com/en-US/support/warranty_registration or scan the code to the right with a QR scanner app on your mobile device.




DOWNLOAD MANUAL & INSTALL GUIDE

Get the Owner's Manual and Software Installation Guide at <http://lexiconpro.com/en-US/products/lambda#documentation> or scan the code to the right with a QR scanner app on your mobile device.



1 MAKE CONNECTIONS

- Set all of the Lambda's knobs fully counter-clockwise – with the exception of the **Monitor Mix** knob, set it to the 12 o'clock position.
- Connect the Lambda to your computer's USB port then make all other connections per your application. See the connection diagrams to the right for reference.

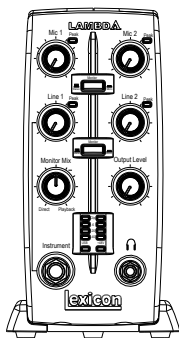

2 DOWNLOAD & INSTALL THE WINDOWS® USB DRIVER

- If using a Windows computer, download the Lambda USB driver from <http://lexiconpro.com/en-US/products/lambda#documentation>.
- Close any running software programs then launch the **Lambda Driver Installer** and follow the on-screen instructions to install it.

NOTE: If using a Mac® computer, the Lambda will use the CoreAudio driver that was already installed with OS X, so no additional driver installation is necessary.

3 DOWNLOAD & INSTALL CUBASE® LE & THE REVERB PLUG-IN


- Go to https://www.steinberg.net/en/mysteinberg/my_products.html and create or log into your MySteinberg account.
- Enter the Cubase LE download access code from the included license card then follow the on-screen instructions to register, download, install, and authorize Cubase LE.
- To download the Lexicon MPX-i reverb plug-in, follow the instructions provided on the included license card.
- Launch the Lexicon **MPX-i Plug-in Installer** and follow the on-screen installation and authorization instructions.

TIP: For additional information on software installation, refer to the Software Installation Guide available at <http://lexiconpro.com/en-US/products/lambda#documentation>.


4 SET RECORDING & MONITORING LEVELS

- If you are recording a mic and monitoring through studio monitors in the same room, turn them down or off and use headphones to avoid bleed and feedback.
- Set the **Output Level** knob to the 9 o'clock position.
- Press the **Monitor** button(s) to select the monitor mode(s) for your application.
- With signal present, gradually increase the channel's gain (**Mic 1**, **Mic 2**, **Line 1**, or **Line 2**) knob until the channel's **Peak** LED just begins to light occasionally without distortion. If necessary, re-adjust the **Output Level** knob for the desired monitoring level. Repeat this step for other channels if applicable.

RECORDING USING THE LINE & MIDI INPUTS

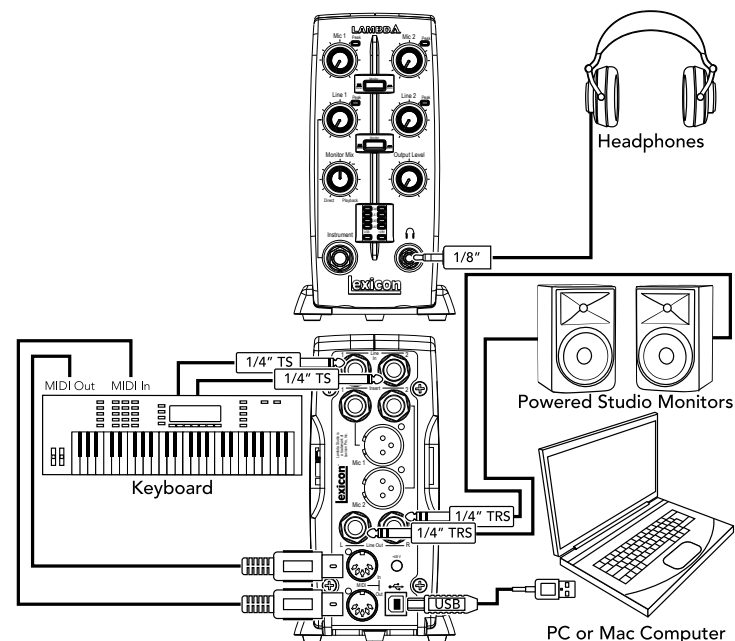

RECORDING USING THE MIC & INSTRUMENT INPUTS

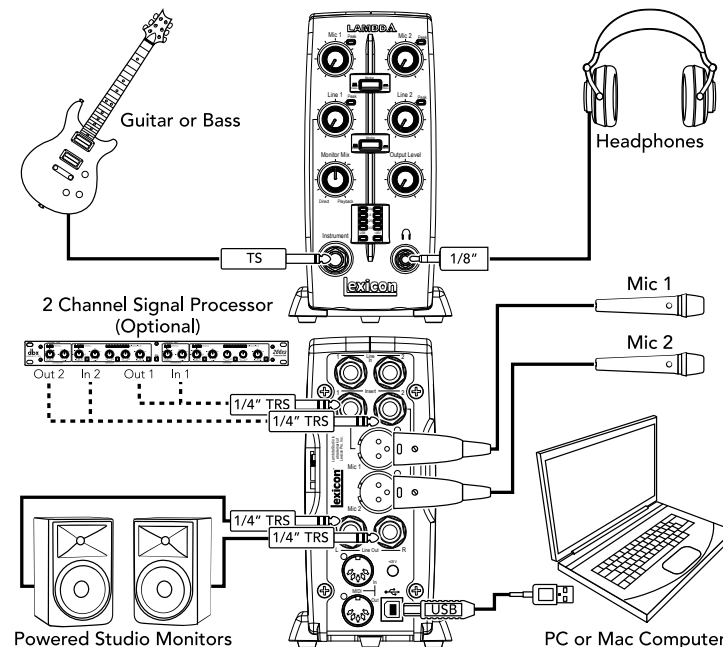

NOTE: When connecting to the **Instrument** input, the **LINE 1** input will be deactivated.