


BOSS

ME-6 GUITAR MULTIPLE EFFECTS

Owner's Manual

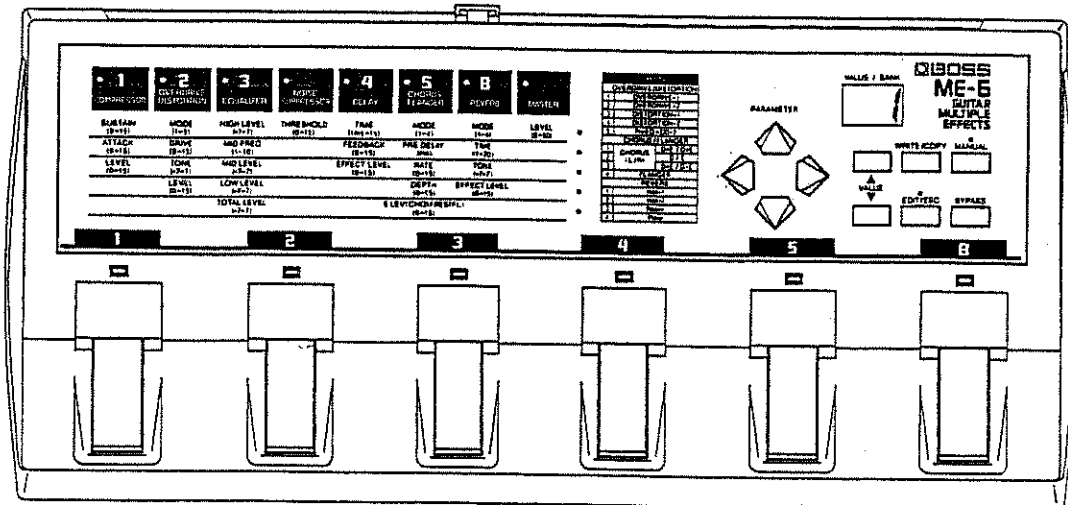

Before You Begin

We'd like to take a moment to thank you for purchasing the BOSS ME-6 Guitar Multiple Effects processor. To become completely familiar with this processor, and to ensure many years of trouble-free service, we recommend that you take the time to read this Owner's Manual thoroughly.

CONTENTS

■ MAIN FEATURES	3	■ STORING THE EFFECTS SETTINGS IN MEMORY: THE WRITE OPERATION	10
■ IMPORTANT NOTES	3	■ DUPLICATING EFFECTS SETTINGS WITH COPY	11
■ PANEL DESCRIPTIONS	4	SECTION III: THE EFFECTS	12
■ MAKING THE CONNECTION	5	● COMPRESSOR (Digital)	12
SECTION I: PLAYING THE ME-6	6	● OVERDRIVE/DISTORTION (Analog)	12
■ PLAYING THE ME-6: PLAY MODE	6	● EQUALIZER (Digital)	13
□ SELECTING A PATCH	6	● NOISE SUPPRESSOR (Digital)	13
■ PLAYING THE ME-6 LIKE A ROW OF PEDAL EFFECTS — THE MANUAL MODE	7	● DELAY (Digital)	14
□ SELECTING THE MANUAL MODE	7	● CHORUS/FLANGER (Digital)	14
□ MANUAL MODE OPERATIONS	7	● REVERB (Digital)	15
■ DIRECT GUITAR SOUND: BYPASS	8	● MASTER LEVEL	15
■ CONTROLLING VOLUME IN REAL TIME	8	SECTION IV: REFERENCE	16
SECTION II : MODIFYING EFFECTS SETTINGS	9	■ BEFORE DECIDING THERE'S A PROBLEM	16
■ YOU CAN CHANGE THINGS IN THE EDIT MODE	9	■ RETURNING TO THE FACTORY SETTINGS — INITIALIZATION	16
□ CHANGING PATCH SETTINGS	9	■ FACTORY SETTINGS	17
□ CANCELING EDITS	10	■ BLANK CHART	18
		■ SPECIFICATIONS	19

For Germany

Bescheinigung des Herstellers/Importeurs

Hiermit wird bescheinigt, daß der/die/das
GUITAR MULTIPLE EFFECTS ME-6
 (Gerät. Typ. Bezeichnung)

in Übereinstimmung mit den Bestimmungen der

Amtsbl. Vfg 1046/1984
 (Amtsblattverfügung)

funk-entstört ist.
 Der Deutschen Bundespost wurde das Inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Roland Corporation Osaka/Japan
 Name des Herstellers/Importeurs

For the USA

RADIO AND TELEVISION INTERFERENCE

WARNING — This equipment has been verified to comply with the limits for a Class B computing device, pursuant to Subpart J of Part 15 of FCC rules. Operation with non-certified or non-verified equipment is likely to result in interference to radio and TV reception.

The equipment described in this manual generates and uses radio frequency energy. If it is not installed and used properly, that is in strict accordance with our instructions it may cause interference with radio and television reception. This equipment has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules. These rules are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by the following measure:

- Disconnect other devices and their input/output cables one at a time. If the interference stops, it is caused by either the other device or its I/O cable.
- These devices usually require Roland designated shielded I/O cables. For Roland devices, you can obtain the proper shielded cable from your dealer. For non Roland devices, contact the manufacturer or dealer for assistance.
- If your equipment does cause interference to radio or television reception, you can try to correct the interference by using one or more of the following measures:
 - Turn the TV or radio antenna until the interference stops.
 - Move the equipment to one side or the other of the TV or radio.
 - Move the equipment farther away from the TV or radio.
 - Plug the equipment into an outlet that is on a different circuit than the TV or radio. (That is, make certain the equipment and the radio or television set are on circuits controlled by different circuit breakers or fuses.)
 - Consider installing a rooftop television antenna with coaxial cable lead-in between the antenna and TV. If necessary, you should consult your dealer or an experienced radio/television technician for additional suggestions. You may find helpful the following booklet prepared by the Federal Communications Commission: "How to Identify and Resolve Radio — TV Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington, D.C., 20402, Stock No. 804-000-00345-4.

For Canada

CLASS B NOTICE

This digital apparatus does not exceed the Class B limits for radio noise emissions set out in the Radio Interference Regulations of the Canadian Department of Communications.

CLASSE B AVIS

Cet appareil numérique ne dépasse pas les limites de la classe B au niveau des émissions de bruits radioélectriques fixés dans le Règlement des signaux parasites par le ministère canadien des Communications.

Copyright © 1992 by BOSS CORPORATION
 All rights reserved. No part of this publication may be reproduced in any form without the written permission of BOSS CORPORATION.

■ MAIN FEATURES

The Best of Analog and Digital Sounds

To enjoy "the best of both worlds", the overdrive/distortion sections are analog, and the chorus, reverb and other effects are created by digital circuits.

Nine Different Kinds of Effects

The ME-6 contains nine different effects specially selected for guitar players.

Simple Editing Operations

The effects parameters are laid out for you on the top panel. This makes it easier for you to edit and create your own sounds.

Store Up to 25 Effects Settings in Memory

You can store up to 25 different effects settings in the ME-6's internal memory. These settings can then be recalled instantly using the footswitch pedals.

Manual Mode for a "Pedal Effect" Feel

The ME-6 has a Manual Mode which lets you use the pedals to switch effects on and off during performance; you can even change effects settings this way. This allows the same amount of freedom you would have if you were using a row of pedal effects.

Long Delay and Reverb with no Cut-off

Delay and reverb will decay naturally instead of being abruptly cut off when you switch from one patch to another.

Tuner Out Jack

A special jack for use with tuners so you can tune your guitar without re-patching your setup.

Headphone Jack

You can plug in a set of headphones so you can hear yourself without going through an amp.

■ IMPORTANT NOTES

Be sure to use only the adaptor supplied with the unit. Use of any other power adaptor could result in damage, malfunction, or electric shock.

Power Supply

- When making any connections with other devices, always turn off the power to all equipment first; this will help prevent damage or malfunction.
- Do not use this unit on the same power circuit with any device that will generate line noise, such as a motor or variable lighting system.
- The power supply required for this unit is shown on its nameplate. Ensure that the line voltage of your installation meets this requirement.
- Avoid damaging the power cord; do not step on it, place heavy objects on it etc.
- When disconnecting the AC adaptor from the outlet, grasp the plug itself; never pull on the cord.
- If the unit is to remain unused for a long period of time, unplug the power cord.

Placement

- Do not subject the unit to temperature extremes (e.g. direct sunlight in an enclosed vehicle). Avoid using or storing the unit in dusty or humid areas or areas that are subject to high vibration levels.
- Using the unit near power amplifiers (or other equipment containing large transformers) may induce hum.
- This unit may interfere with radio and television reception. Do not use this unit in the vicinity of such receivers.
- Do not expose this unit to temperature extremes (e.g. direct sunlight in an enclosed vehicle can deform or discolor the unit) or install it near devices that radiate heat.



Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth (or one that has been slightly dampened with water). To remove stubborn dirt, use a mild neutral detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the risk of discoloration and/or deformation.

Additional Precautions

- Protect the unit from strong impact.
- Do not allow objects or liquids of any kind to penetrate the unit. In the event of such an occurrence, discontinue use immediately. Contact qualified service personnel as soon as possible.
- Before using the unit in a foreign country, consult with qualified service personnel.
- Should a malfunction occur (or if you suspect there is a problem) discontinue use immediately. Contact qualified service personnel as soon as possible.
- To prevent the risk of electric shock, do not open the unit or its AC adaptor.


■ PANEL DESCRIPTIONS

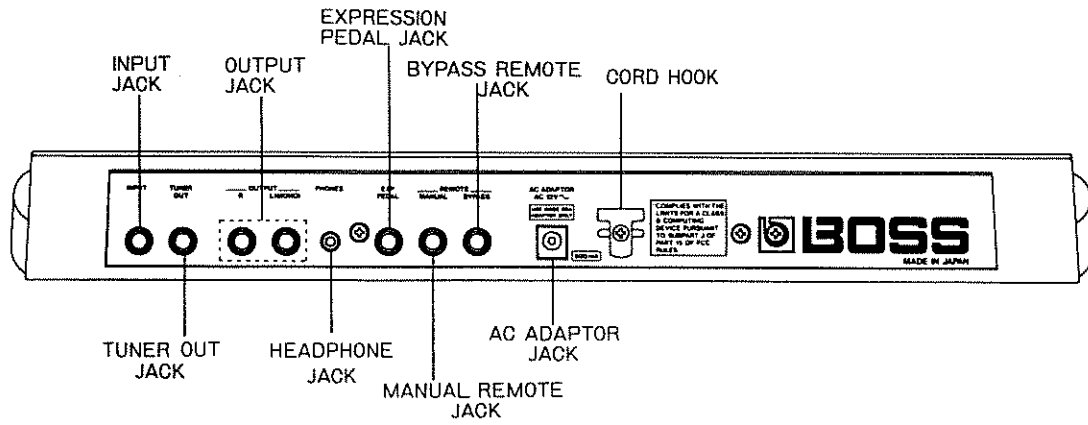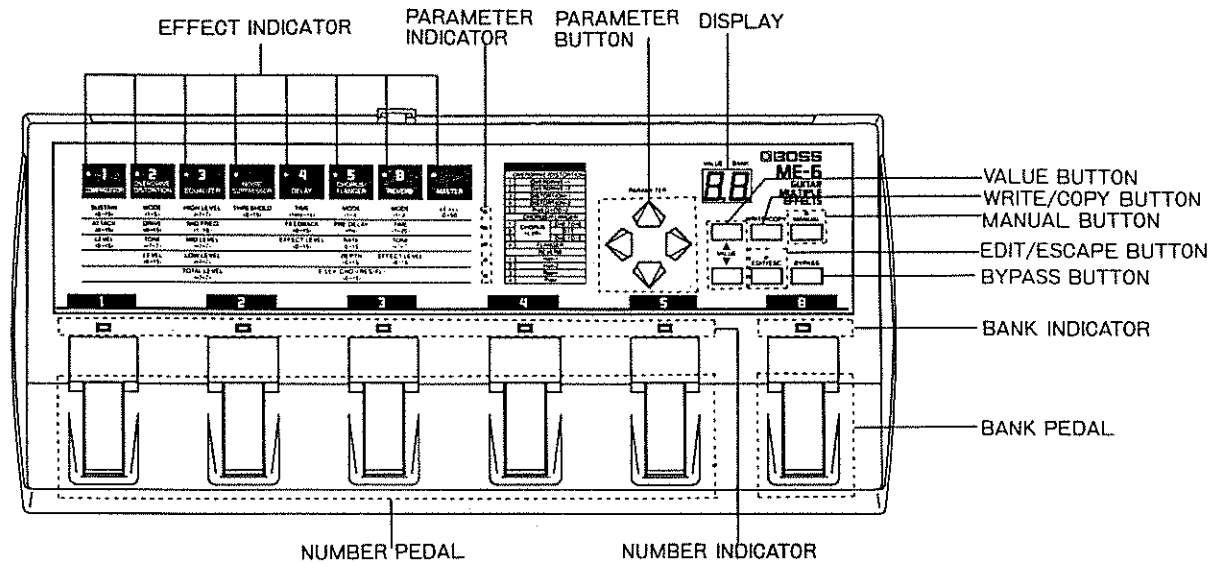

■ MAKING THE CONNECTION



The diagram below shows you how to connect the included ME-6 AC adaptor, a guitar and guitar amp. As soon as the AC adaptor is plugged in and you turn the power on, the ME-6 is in the "Play Mode", ready to go.

- * When making any connections, be sure all devices are turned off and the volume on your amp is at zero. If you try to connect everything with the power on, you may get voltage spike "pops" that can damage speakers or cause trouble down the line.
- * After you've turned everything on, you can turn up the amp.
- * If you require a mono output, use the OUTPUT L (MONO) jack.
- * After turning on the ME-6, give it a minute to let the voltage stabilize.
- * If you have an Expression Pedal (optional) plugged into the EXP. PEDAL jack, turn the volume on it to MIN. For more information, refer to page 8.

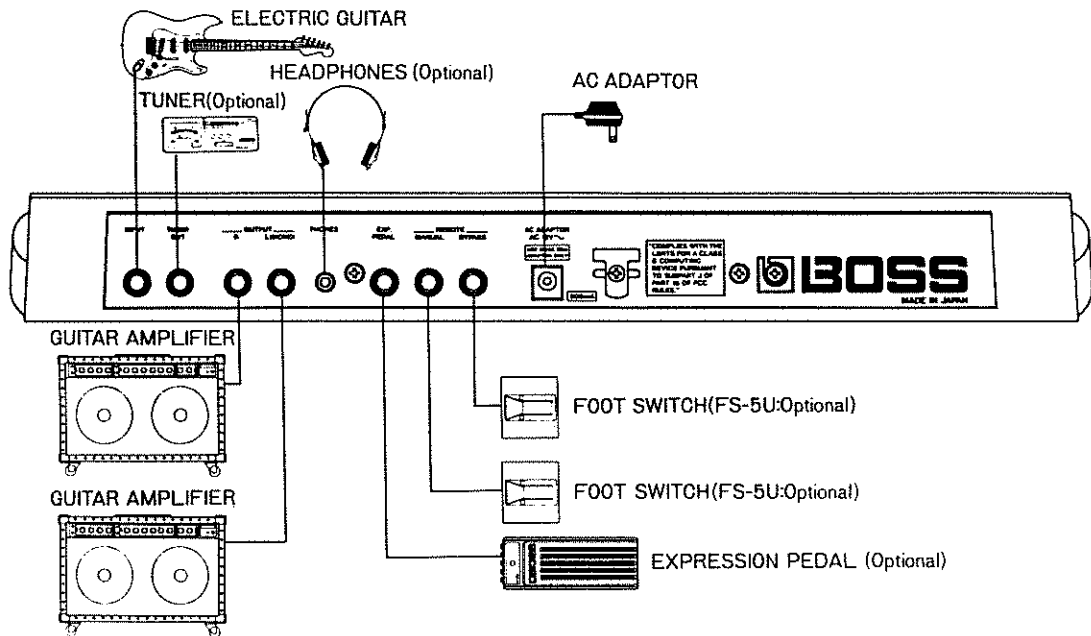

- * Loop the AC adaptor cord around the cord hook. This will help prevent the cord from being accidentally disconnected.

- * Set the polarity switch as shown below for each remote footswitch (FS-5U; optional) that you connect.

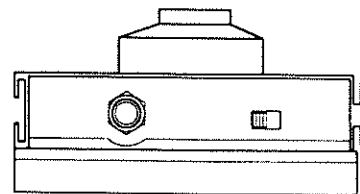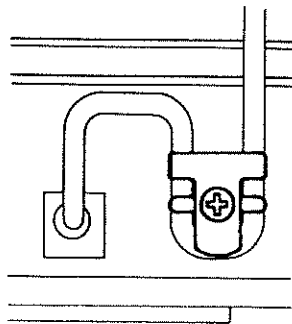

SECTION I: PLAYING THE ME-6

■ PLAYING THE ME-6: PLAY MODE

(What's a Patch?)

The ME-6 can store 25 different combinations of effects settings and parameters in memory. Each collection of settings is called a "patch". These 25 patches are split up into five memory "banks", each containing five patches. Each patch in the ME-6 is identified by a combination of a bank number and a patch number within that bank. You'll use this system to "call up" the patches you need during play.

* When you first turn the power on, BANK: 1 NUMBER: 1 is automatically selected.

		BANK				
		1	2	3	4	5
NUMBER	1	1	6	11	16	21
	2	2	7	12	17	22
	3	3	8	13	18	23
	4	4	9	14	19	24
	5	5	10	15	20	25

□ SELECTING A PATCH

1. Select the Bank

① Depress the Bank Pedal.


The bank number will flash in the display.

② Depress a Number pedal.

You switch to the desired bank number by depressing the corresponding Number Pedal (1 through 5).

Depressing a Number Pedal at this point only changes the bank number, it does not select a new patch. The patch is not actually selected until you choose a number within that bank.


* Depress the Bank [B] Pedal again if you wish to return to the original patch without changing banks.

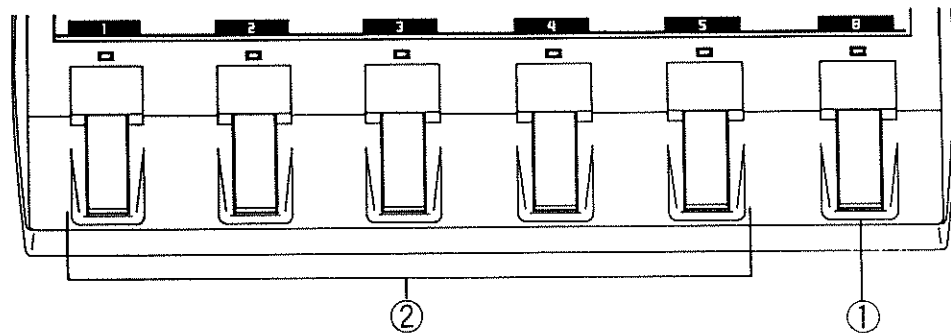

2. Select the Number

Depress the desired Number Pedal (1 through 5), and the display will change to that number. The patch identified by that bank/number combination is now selected.

* If you wish to select a different patch within the same bank, you don't have to reselect the bank; just depress the appropriate Number Pedal.

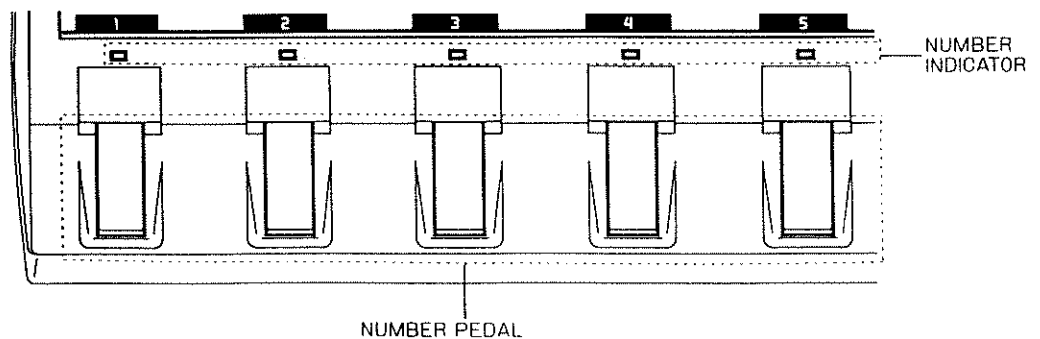


■ PLAYING THE ME-6 LIKE A ROW OF PEDAL EFFECTS — THE MANUAL MODE

A “Manual Mode” setting is also stored with each of the patches in the ME-6’s memory. The “Manual Mode” is where you can turn effects on and off by depressing the Number Pedals or the Bank Pedal. This makes the ME-6 feel just like a series of “pedal effect” effects. The Manual Mode effects setting will be just the way you do it when you return to it again.

□ SELECTING THE MANUAL MODE


⟨Using the Panel Buttons⟩

Press the **MANUAL** button to switch between Manual Mode ON/OFF. The MANUAL Indicator will be on while you are in the Manual Mode.

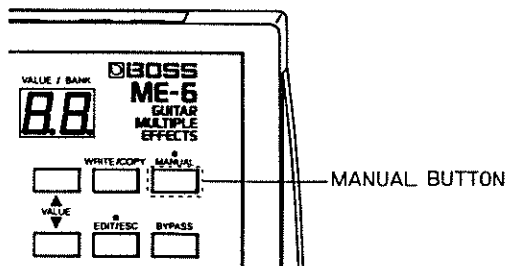

⟨Using the Footswitch⟩


When you have a footswitch (FS-5U; optional) connected to the MANUAL REMOTE jack, you can also use it to turn the Manual Mode ON/OFF. It works in the same way as using the panel buttons.

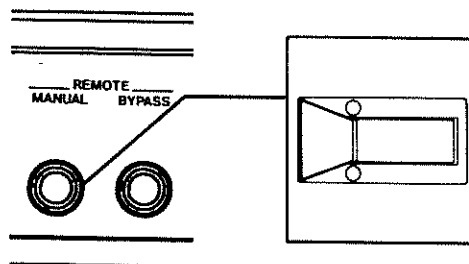

□ MANUAL MODE OPERATIONS

⟨⟨Switching Effects ON/OFF⟩⟩

In the Manual Mode, you can switch effects on or off using the Number/Bank Pedals. When the indicator over a pedal is lit, that effect is on. The effects are assigned to the pedals as follows:

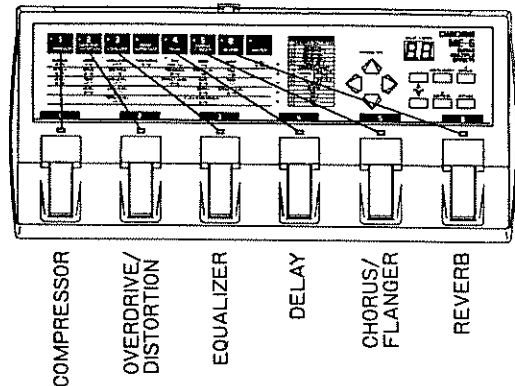

- * The Noise Suppressor is on all the time, and can't be turned on and off like the others.

⟨⟨Setting and Changing Parameters⟩⟩

You can set or edit parameters for any effect in real-time. Here's how:

- ① **Select the parameter to be edited.**
Select the effect to be edited with the PARAMETER buttons, and the parameter to be edited with the PARAMETER buttons. The exact parameter you will be editing is beneath the flashing Effect indicator and across from the lit Parameter indicator. Its current setting will be shown in the display.
 - * If you select a parameter for an effect which is currently turned off, the value in the display will flash.
- ② **Change the setting with the VALUE buttons.**
While holding the button, you can increase the scrolling speed by pressing the button for the opposite direction, . This procedure works for either button.


Repeat steps ① and ② to change other parameter settings.

■ DIRECT GUITAR SOUND: BYPASS

When Bypass is ON, you'll hear the direct sound (without effects) of the guitar connected to the ME-6.

(Using the Panel Buttons)


Press the **[BYPASS]** button to switch between Bypass ON/OFF. When it's ON, the display will read "BB".

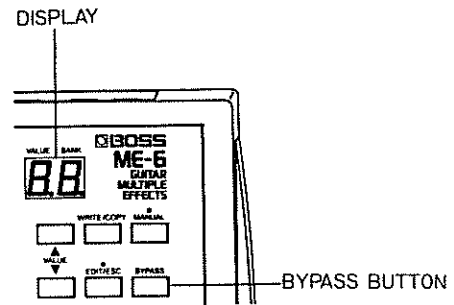

(Using the Footswitch)

When you have a footswitch (FS-5U; optional) connected to the BYPASS REMOTE jack, you can use it to switch between Bypass ON/OFF. It works in the same way as using the panel buttons.

- * The Bypass setting cannot be stored in memory as part of a patch.

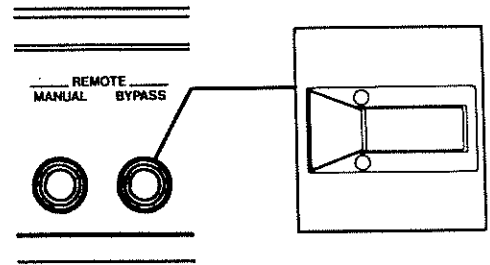


■ CONTROLLING VOLUME IN REAL TIME

An expression pedal (optional) connected to the EXP. PEDAL jack will let you control the volume output in real-time. In addition, if you cut the volume with expression pedal control, lingering effects like delay and reverb will decay naturally instead of being suddenly cut off.

- * Be sure to use the minimum volume setting (MIN) on the expression pedal you have connected to the EXP. PEDAL jack.

In fact, the expression pedal is inserted into the effects chain as shown in the diagram below.

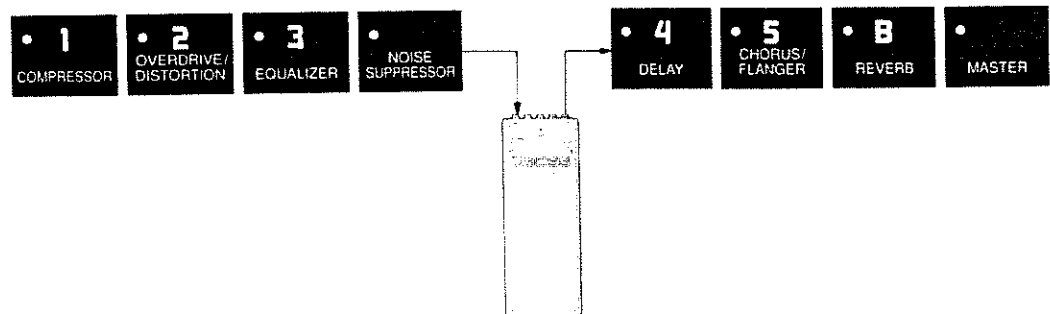

SECTION II: MODIFYING EFFECTS SETTINGS

■ YOU CAN CHANGE THINGS IN THE EDIT MODE


It's easy to change effects settings and save them as a patch. We'll show you how to do just that in this section.

□ CHANGING PATCH SETTINGS

Each of the 25 patches stored in the ME-6 has "default" settings made at the factory. By changing these settings, you can make up your own original effects sounds. This is what we mean by "editing".

The following steps allow you to edit a patch.


- ① **From the Play Mode, call up the patch you wish to edit.** Refer to page 6 if you want a refresher on "Selecting a patch".
- ② **Press the **EDIT/ESC** button.**
This selects the Edit Mode (the EDIT/ESC indicator will light). The parameter settings you select will be shown in the display.
- ③ **Turning effects ON/OFF.**
Turn effects on or off by pressing the appropriate Bank/Number Pedals. You can check the indicator over each of the pedals to see if that effect is on or off. The effects are assigned to the pedals as follows:

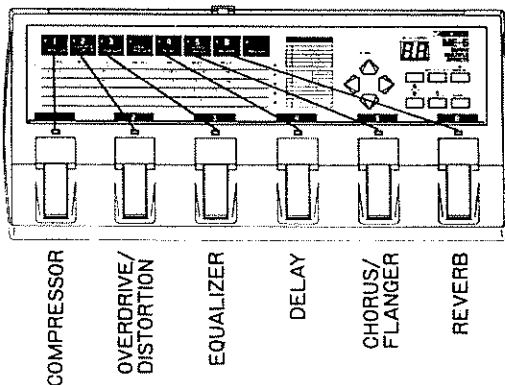

- * The Noise Suppressor is on all the time, and can't be turned on and off like the others.

- ④ **Now select the parameter you want to edit.**
Press the PARAMETER **◀ ▶** buttons to select the effect to be edited, then the parameter you wish to edit with the PARAMETER **▼ ▲** buttons. Cross-indexing the effect and parameter indicator lights will show you which parameter is selected, and the parameter setting will be shown in the display.

- * If you select a parameter for an effect that is turned off, its setting will flash in the display.

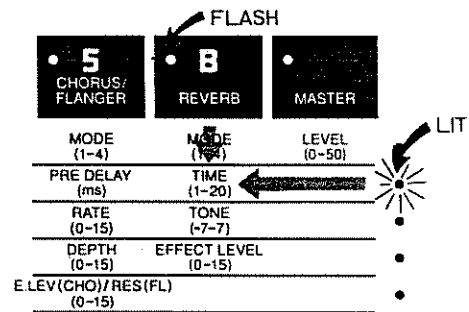

- ⑤ **Change the parameter values.**
Watch the display, and change the parameter values with the VALUE **▼ ▲** buttons.

Repeat steps c through e until the settings are as you want them.

- * At this point, if you turn off the ME-6 the patch will revert back to its pre-edit settings. If you want to actually store the patch settings after editing, you must perform the "Write operation" as described on page 10.

□ CANCELING EDITS

After editing a patch, but before saving it with the Write operation, you can cancel the edits and return to the pre-edit settings. Here's how:

- ① Press the **EDIT/ESC** button. The EDIT/ESC indicator will flash rapidly.
 - * To continue editing the patch, press a **PARAMETER** or **VALUE** button.
 - * Actually, if you press this button in the Edit Mode and you haven't turned any effects on or off and didn't change any settings, you will be returned immediately to the Play Mode.
- ② Press **EDIT/ESC** one more time.

The EDIT/ESC indicator will go out and you're back in the Play Mode. All the changes you have made to the patch during editing are lost, and you're back to the original settings again.

■ STORING THE EFFECTS SETTINGS IN MEMORY: THE WRITE OPERATION

Even after you've edited a patch, and played with it a while, the changes you have made will be lost if the power is turned off. To save the patch with edits intact, you must store it with the Write operation.

《《Storing a Patch in Memory》》

- ① Press the **WRITE/COPY** button.

The EDIT/ESC indicator will flash (at a slow rate), and the display and pedal indicator lights will reflect the settings for the current patch.
- ② Select a patch into which you'll store this data.

Check out "Selecting a Patch" on page 6 for more information on how patches are designated.

 - * If you are saving an edited patch back to its original patch number, well, you're already at that patch number so there is no need to reselect the patch. Skip step ② and go to step ③.
 - * If you save an edited patch to a different patch number, the patch you started from remains unchanged and in its original location.
 - * To cancel a Write operation, press a **Parameter** or **Value** button. You'll be returned to the Edit Mode.
- ③ Press the **WRITE/COPY** button again.

This stores the edited patch in memory. When the operation is complete, you'll be transferred to that new patch number and returned to the Play Mode.

《《Storing Manual Mode Settings》》

- ① Press the **WRITE/COPY** button.

The EDIT/ESC indicator will flash slowly, and the display and number indicators will reflect the settings for the current patch.
- ② Press the **MANUAL** button.

The MANUAL indicator will light to show that you're now storing Manual setting.

 - * Press the **MANUAL** button again (the MANUAL indicator will go out), and you're back to where you can store patch data.
 - * To cancel a Write operation, press a **PARAMETER** or **VALUE** button. You'll be returned to the Edit Mode.
- ③ Press the **WRITE/COPY** button again.

This stores the Manual settings for that patch along with the patch data. When the operation is over, the MANUAL indicator will come on to show that you're now in the Manual Mode.

■ DUPLICATING EFFECTS SETTINGS WITH COPY

Sometimes you may want the contents of one patch copied to another patch location. Not only can you copy from one patch to another, you can also copy between patches and Manual setting.

《Copying From One Patch To Another》

- ① **Select the patch to copy from.**
Check out "Selecting A Patch" on page 6 for more information on how to do this.
- ② **Press the **WRITE/COPY** button.**
The EDIT/ESC indicator will flash slowly, and the display and pedal indicators will show the current patch.

* **To cancel the Copy and return to the Play Mode, press the **EDIT/ESC** button.**
- ③ **Select the patch to copy to.**
- ④ **Press the **WRITE/COPY** button once more.**
The contents of the "from" patch will be copied to the "to" patch. When the copying is complete, you'll be moved to the "to" patch and be in the Play Mode.

《Copying the Contents of a Patch to Manual》

- ① **Select the Patch to Copy From.**
Check out "Selecting A Patch" on page 6 if you need more information on how to do this.
- ② **Press the **WRITE/COPY** button.**
The EDIT/ESC indicator will flash slowly.
- ③ **Press the **MANUAL** button.**
The MANUAL indicator will come on, indicating the "copy to" is a Manual setting.

* **Press the **MANUAL** button again (the MANUAL indicator will go out), and you can once again save to patches.**
* **To cancel the Copy operation and return to the Play Mode, press the **EDIT/ESC** button.**
- ④ **Press the **WRITE/COPY** button again.**
The patch contents are now copied into the Manual setting. When the copy operation is complete, you'll be in the Manual Mode.

《Copying the Manual Setting to a Patch》

- ① **Press the **MANUAL** button to enter the Manual Mode**
(the MANUAL indicator will come on).
- ② **Press the **WRITE/COPY** button.**
The EDIT/ESC indicator will flash slowly, and the display and indicator lights will show the current patch.
- ③ **Select a patch to copy to.**
See "Selecting a Patch" on page 6 for more information on this.


* **To cancel this Copy operation and return to the Manual Mode, press the **EDIT/ESC** button.**
- ④ **Press the **WRITE/COPY** button again.**
The Manual setting is now copied to the selected patch. When the copy operation is complete, you'll be returned to that patch and be in the Play Mode.

SECTION III: THE EFFECTS

With the ME-6 you can create your own sounds by combining effects and changing their parameters. In this section we'll tell you about what each of the effects does, and what changes you can make with the parameters.

● COMPRESSOR (Digital)

This effect "compresses" high input signals and "expands" low input signals (i.e., makes loud sounds a little softer and softer sounds a little louder). By making the overall volume more uniform, a distortion-free sustain effect is produced.

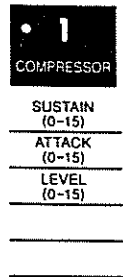

○ SUSTAIN (0 to 15)

Expands low input signals and adjusts the range (time) over which the volume is made more uniform. Larger values mean longer sustain. With smaller values of this parameter, this effect can be used as a "limiter" to suppress only the highest input signals.

○ ATTACK (0 to 15)


Adjusts the "picking" time and attack intensity. Larger values make the start of each note cleaner and improve articulation of the sound.

○ LEVEL (0 to 15)

This parameter adjusts the volume of the compressor. This is used for adjusting the balance between effects as they are turned on and off.

● OVERDRIVE/DISTORTION (Analog)

This distorts the sound and gives it a long sustain. The different "modes" are different kinds of distortion effects that you can tailor to match your needs.

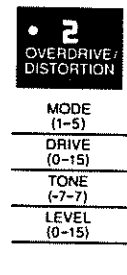

○ MODE (1/2/3/4/5)

Selects the distortion type. Overdrives 1 and 2 give you a mild distortion that sounds like it came from a tube amp. Distortions 1 and 2 give you a harder sound. To really fatten up the sound, Mode 5 reverses the order of distortion and equalizer in the effects chain so you can pre-equalizer the distortion.

- Mode 1: Overdrive 1
- Mode 2: Overdrive 2
- Mode 3: Distortion 1
- Mode 4: Distortion 2
- Mode 5: Pre-Equalizer + Overdrive 2

○ DRIVE (0 to 15)

This parameter adjusts the sound of the distortion. The larger this number, the more intense the distortion effect.

○ TONE (-7 to +7)


This parameter adjusts the tone color of the Overdrive/Distortion. Positive values boost the treble, making it brighter.

○ LEVEL (0 to 15)

This parameter adjusts the volume of the Overdrive/Distortion. This is used for adjusting the balance between effects as they are turned on and off.

● EQUALIZER (Digital)

A three-band equalizer with parametric control in the mid-range; the most important frequency range for a guitar.



HIGH LEVEL (-7 to +7)

This parameter adjusts the treble. Positive values boost treble, negative values cut it.

MIDDLE FREQUENCY (1 to 10)

Sets the central frequency of the mid-range that will be adjusted by the Middle Level control. Larger values indicate higher frequencies.

MIDDLE LEVEL (-7 to +7)

This parameter adjusts the mid-range level. Positive values boost the level, negative values cut it.

LOW LEVEL (-7 to +7)

This parameter adjusts the bass. Positive values boost the bass, negative values cut it.


TOTAL LEVEL (-7 to +7)

This parameter adjusts the volume of the Equalizer. It is used for adjusting the balance between effects as they are turned on and off.

● NOISE SUPPRESSOR (Digital)

Suppresses induced hum and noise from the guitar pickup. By taking into account the guitar sound "envelope" (variation of volume over time of the guitar sound), we're able to reduce the noise, without affecting the resonance of your guitar. This creates a more natural sound.

* **The Noise Suppressor is always on.**

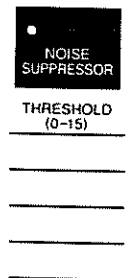


THRESHOLD (0 to 15)

Adjustable for the noise level: high for high noise; low for low noise. Set this so that you can hear the guitar notes decay naturally.

* **If the threshold is set too high, it may cut out soft guitar notes as well as noise! (This might be the problem if you are playing and nothing is heard.)**

● DELAY (Digital)

Electronically “delayed” sounds are added to the direct sounds from the guitar. Using Delay fattens the sound, and can be used for special effects as well.



○ DELAY TIME (1 ms to 1 s)

This parameter adjusts the delay time.

Delay times are shown in the display as follows:

1 ms to 95 ms: $\dot{1}$ to 95 (in units of msec)

100 ms to 980 ms: 10 to 98 (in units of 10 msec)

1.00 s: 1.0 (in units of seconds)

○ FEEDBACK (0 to 15)


Adjusts the feedback volume of the delayed sound. Larger values mean more and more repeats of the sound, while a setting of “0” gives you a single repeat of the delayed sound.

○ EFFECT LEVEL (0 to 15)

This parameter adjusts the volume of the delayed sound. Larger values boost the volume of the delayed sound, and at “13” the direct and delayed volumes are almost the same.

● CHORUS/FLANGER (Digital)

The Chorus effect makes the sound fatter and more expansive, and the Flanger effect creates an undulating sound.

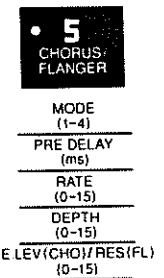

○ MODE (1/2/3/4)

Selects the kind of effect, whether Chorus or Flanger.

Mode 1: (Chorus: D+E/D+E)

The direct sound (pre-chorus) and effect sound (after chorus is applied) are combined and then output. The sound in the left and right channels is identical in this case, so this is the mode to use if you want to use the ME-6 in mono.

Mode 2: (Chorus: D/E)

This is a stereo-only mode. The direct and effect sounds are output separately (to the left and right channels respectively). This gives you a really broad chorus sound by using “air” rather than electronics to mix the direct and effect sounds.

Mode 3: (Chorus: D+E/D-E)

This too is a stereo-only mode. This mode outputs left and right channels out of phase, giving a pseudo-stereo effect.

* **You will not get a chorus effect if you use this mode in mono.**

Mode 4: Flanger

Applies a Flanger effect.

○ PRE DELAY

Adjusts the time between output of the direct sound and the effect sound. This has a different effect depending on whether Chorus or Flanger is selected:

Chorus (1 to 30 ms):

Increasing the pre-delay parameter creates a “doubling effect” (like several instruments playing in unison).

Flanger (0.1 to 3.0 ms):

Adjusting the pre-delay parameter varies the central frequency of the flanging effect. The shorter the pre-delay time, the higher the central frequency, and vice versa. Ordinarily, this is a Manual parameter.

○ **RATE (0 to 15)**
 This parameter adjusts the rate of undulations in the Chorus or Flanger sound. Larger values create faster variation.


○ **DEPTH (0 to 15)**
 This parameter adjusts the depth of the Chorus and Flanger modulation. Larger values create deeper modulations.

○ **EFFECT LEVEL (Chorus) (0 to 15)**
 This adjusts the volume of the effect sound. Larger values increase the amount of effect sound, and at "15" the direct and effect volumes are equal.

○ **RESONANCE (Flanger) (0 to 15)**
 This adjusts the Flanger resonance volume (feedback volume). The larger the value, the more pronounced the effect.

● **REVERB (Digital)**

Reverb is the complex reflection of sound which builds up naturally in any room or hall. For example, if you clap your hands outdoors, you just hear the clap. But when you clap your hands in a church, for example, there is a lingering echo-like sound call the reverberation or reverb. The sound of the reverb depends on the size of the space (room, hall, etc.) and the shape and material of the reflecting surfaces (such as the walls). All these elements are digitally simulated in the ME-6.



○ **MODE (1/2/3/4)**
 This parameter sets the reverb mode:
 1 (Hall-1): Simulates the clear reverb sound of a concert hall.
 2 (Hall-2): Simulates the reverb of a concert hall; a well controlled reverb sound.
 3 (Room): Simulates the bright reverb of a very "live" room.
 4 (Plate): Simulates a plate reverb (an early but popular type of analog reverb that used electrically-charged vibrating plates). The treble is expanded to give it a metallic resonance quality.

○ **TIME (1 to 20)**
 This parameter adjusts the reverberation time. Larger values correspond to longer reverberation time.


○ **TONE (-7 to +7)**
 This parameter adjusts the tone quality of the reverb sound. Positive values emphasize the treble and make it brighter, while negative values soften the sound.

○ **EFFECT LEVEL: (0 to 15)**
 Adjusts the reverb volume.

● **MASTER LEVEL (0 to 50)**

This adjusts the overall volume output of the ME-6.

* If all the effects are off and you want the input guitar signal to be the same volume as the output, set this to "42".



SECTION IV: REFERENCE

■ BEFORE DECIDING THERE'S A PROBLEM...

If no sound is produced, or if things are not working as expected, check the following items. Do not attempt to service the product beyond that described in the user-maintenance instructions.

No Sound/Low Level Sound

- Are other devices hooked up correctly?
- Is the connected amp or mixer turned off, or maybe the volume is set too low?
- Are the patch settings set correctly? This includes things like checking to see that the parameter LEVEL settings are not set too low.
- Is the expression pedal volume all the way down?






Can't Select a Patch

- The patch won't change until you've depressed a Number Pedal.
- Is Bypass on?
- Are you in the Manual Mode?
- Are you in the Edit Mode?





■ RETURNING TO THE FACTORY SETTINGS — INITIALIZATION

You can return all the settings to the way they were at the factory (initialization). There is also a way to initialize just one patch, or all the patches.

⟨⟨Initialize Just One Patch⟩⟩

- ① Turn the power off.
- ② Press and hold the PARAMETER  and  buttons and turn the power on again.
The EDIT/ESC indicator will flash.
- ③ Select the patch you want to initialize.
See page 6 for more information on selecting patches.
* To cancel the initialization at this time, press the  button. You'll be moved to the Play Mode.
- ④ Press the  button.
The selected patch will be initialized.
- ⑤ Press the  button.
You'll be moved to the Play Mode. If you want to continue initializing individual patch numbers, simply repeat steps ③ and ④.

⟨⟨Initialize All Patches⟩⟩

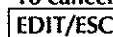- ① Turn the power off.
- ② Press and hold the PARAMETER  and  buttons and turn the power on again.
The EDIT/ESC indicator will flash and the display will read "L d".
* To cancel the initialization at this time, press the  button. You will be returned to the Play Mode.
- ③ Press the  button.
When the initialization is complete, you'll be moved to the Play Mode.

FACTORY SETTINGS

EFFECTOR	BANK	1					2					3					4					5									
		1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5					
COMPRESSOR	SUSTAIN	7	—	5	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	ATTACK	8	—	9	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	LEVEL	11	—	12	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
OVERDRIVE/ DISTORTION	MODE	5	2	—	5	4	4	3	—	4	4	2	1	—	2	3	2	5	—	3	5	5	1	—	4	5	—	—	—	—	—
	DRIVE	8	3	—	10	12	15	15	—	15	11	12	14	—	10	12	10	8	—	15	10	10	8	—	14	10	—	—	—	—	—
	LEVEL	-2	-3	—	-2	0	0	0	—	0	0	-2	-1	—	-2	-4	0	0	—	0	0	0	0	—	0	0	—	—	—	—	—
EQUALIZER	HIGH LEVEL	11	12	—	12	10	11	11	—	11	11	12	11	—	12	12	12	12	—	12	10	12	12	—	11	10	10	10	—	—	—
	MIDDLE FREQ	-2	-4	—	-2	—	3	0	-2	1	0	-1	-2	-6	0	-6	0	-2	0	1	-1	-5	-4	—	2	-2	-2	-2	—	—	—
	MIDDLE LEVEL	4	6	—	3	—	6	10	5	9	8	3	2	1	4	3	2	1	4	3	6	7	9	5	4	4	—	—	—	—	—
N. SUPPRESSOR DELAY	LOW LEVEL	4	2	—	4	—	-4	-7	1	4	2	2	0	0	2	0	3	5	1	-2	5	6	—	—	-6	2	7	—	—	—	—
	TOTAL LEVEL	0	2	—	3	—	6	5	0	5	0	1	2	-2	0	-4	1	5	-5	0	0	0	-2	—	0	2	0	0	—	—	—
	THRESHOLD	-2	0	—	0	—	0	0	-4	0	0	-1	0	1	-2	2	-1	0	0	0	-5	0	-2	—	0	2	0	0	—	—	—
CHORUS/ FLANGER	DELAY TIME	3	3	3	3	3	4	4	4	4	4	3	3	3	3	3	3	4	4	4	3	4	4	3	3	3	3	3	3	3	3
	FEEDBACK	320	—	360	60	400	35	—	—	—	—	190	280	—	200	—	480	260	—	110	200	—	260	—	220	—	200	—	—	—	—
	EFFECT LEVEL	6	—	4	5	6	0	—	—	—	—	0	5	—	6	—	5	2	—	0	3	—	6	—	6	—	6	—	—	—	—
REVERB	MODE	5	—	8	8	8	7	—	—	—	—	8	—	5	—	8	4	—	8	3	—	6	—	6	—	5	—	—	—	—	—
	PRE DELAY	1	—	1	—	4	—	1	4	—	1	—	—	1	1	1	1	—	1	—	1	—	—	—	—	—	—	—	—	—	—
	RATE	16	—	20	—	0.8	—	10	0.1	—	1	—	—	18	20	20	—	—	—	30	—	15	—	—	12	1	—	—	—	—	—
MASTER LEVEL	DEPTH	6	—	7	—	7	—	2	5	—	7	—	—	10	7	7	—	—	—	14	—	9	—	—	8	12	—	—	—	—	—
	E. LEV/RES	6	—	10	—	7	—	7	12	—	11	—	—	6	10	10	—	—	—	0	—	9	—	—	6	3	—	—	—	—	—
	MODE	8	—	15	—	8	—	8	12	—	13	—	—	15	15	15	—	—	—	15	—	13	—	—	15	15	—	—	—	—	—
REVERB	TIME	—	1	—	4	—	—	2	2	2	—	—	—	1	—	1	—	—	—	3	—	3	—	—	1	—	—	—	—	—	—
	LEVEL	—	11	—	12	—	—	10	9	13	—	—	—	11	11	—	—	—	—	12	10	—	—	—	12	10	—	—	—	—	—
	EFFECT LEVEL	—	0	—	0	—	—	0	7	0	—	—	—	0	0	—	—	—	—	0	—	—	—	—	0	—	—	—	—	—	—
REVERB	REVERB	—	9	—	9	—	—	6	9	5	—	—	—	8	—	9	—	—	—	4	—	8	—	—	6	8	—	—	—	—	—
	MASTER LEVEL	50	48	31	48	50	40	42	50	32	38	46	50	44	45	46	36	40	50	38	50	46	50	46	50	50	50	50	50	50	50

OVERDRIVE/ 1: OVERDRIVE-1
 DISTORTION 2: OVERDRIVE-2
 3: DISTORTION-1
 4: DISTORTION-2
 5: PreEQ+OD-2

CHORUS/
 FLANGER 1: CHORUS (L/R) (D+E/D+E)
 2: CHORUS (L/R) (D/E)
 3: CHORUS (L/R) (D+E/D-E)
 4: FLANGER

REVERB 1: Hall-1
 2: Hall-2
 3: Room
 4: Plate

■ BLANK CHART

EFFECTOR	BANK NUM	1					2					3					4					5									
		1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5					
COMPRESSOR	SUSTAIN																														
	ATTACK																														
	LEVEL																														
OVERDRIVE/ DISTORTION	MODE																														
	DRIVE																														
	TOPE																														
	LEVEL																														
EQUALIZER	HIGH LEVEL																														
	MIDDLE FREQ																														
	MIDDLE LEVEL																														
	LOW LEVEL																														
	TOTAL LEVEL																														
N.SUPPRESSOR	THRESHOLD																														
DELAY	DELAY TIME																														
	FEEDBACK																														
	EFFECT LEVEL																														
CHORUS/ FLANGER	MODE																														
	PRE DELAY																														
	RATE																														
	DEPTH																														
	E. LEV/RES																														
REVERB	MODE																														
	TIME																														
	TOPE																														
	EFFECT LEVEL																														
MASTER LEVEL																															

OVERDRIVE/
DISTORTION 1: OVERDRIVE-1
 2: OVERDRIVE-2
 3: DISTORTION-1
 4: DISTORTION-2
 5: PreEQ+OD-2

 CHORUS/
FLANGER 1: CHORUS [L/R] (D+E/D+E)
 2: CHORUS [L/R] (D/E)
 3: CHORUS [L/R] (D+E/D-E)
 4: FLANGER

 REVERB 1: Hall-1
 2: Hall-2
 3: Room
 4: Plate

■ SPECIFICATIONS

ME-6:Guitar Multiple Effects:

Signal Processing (Except Overdrive/Distortion):

AD Conversion:	18 bit linear
DA Conversion:	16 bit linear
Sampling Frequency:	44.1kHz
Patches:	25 + Manual Setting
Effects:	Compressor, Overdrive/Distortion, Equalizer, Noise Suppressor, Delay, Chorus/Flanger, Reverb

Nominal Input Level:	-20dBm
Input Impedance:	1M Ω
Nominal Output Level:	-20dBm
Output Impedance:	5.7k Ω
Recommended Load Impedance:	47k Ω or greater
Display:	7 segments, 2 characters (LED)
Connectors:	Input Jacks (1/4 inch phone type) Output Jacks (1/4 inch phone type) \times 2 (L (MONO), R) Tuner Out Jack (1/4 inch phone type) Expression Pedal Jack Manual Remote Jack Bypass Remote Jack Headphone Jack (stereo mini type) AC Adaptor Jack (AC 12V)
Power Supply:	AC12V:AC Adaptor BRA Series
Current Draw:	500mA
Dimensions:	442 (W) \times 200 (D) \times 52.5 (H) mm 17-7/16 \times 7-7/8 \times 2-1/8 inch
Weight:	2.2kg/4 lbs 14 oz
Accessories:	AC Adaptor BRA Series Owner's Manual
Options:	Footswitch FS-5U Foot Volume/Expression FV-300L with PCS-33 Expression Pedal EV-5 Stereo Cord PCS-33 Chromatic Tuner TU Series

* 0dBm=0.775Vrms

* The specifications for this product are subject to change without prior notice.

Information

When you need repair service, call your local Roland Service Station or the authorized Roland distributor in your country as shown below.

U. S. A.

Roland Corporation US
7200 Dominion Circle
Los Angeles, CA.
90040-3647, U. S. A.
☎ (213)685 - 5141

CANADA

Roland Canada Music Ltd.
(Head Office)
5480 Parkwood
Richmond B. C., V6V 2M4
CANADA
☎ (604)270 - 6626

Roland Canada Music Ltd.
9425 Transcanadienne
Service Rd. N., St Laurent,
Quebec H4S 1V3,
CANADA
☎ (514)335 - 2009

Roland Canada Music Ltd.
346 Watline Avenue,
Mississauga, Ontario L4Z
1X2, CANADA
☎ (416)890 - 6488

AUSTRALIA

Roland Corporation
(Australia) Pty. Ltd.
(Head Office)
38 Campbell Avenue
Dee Why West. NSW 2099
AUSTRALIA
☎ (02)982 - 8266

Roland Corporation
(Australia) Pty. Ltd.
(Melbourne Office)
50 Garden Street
South Yarra, Victoria 3141
AUSTRALIA
☎ (03)241 - 1254

UNITED KINGDOM

Roland(U.K.) Ltd.
Rye Close
Ancells Business Park
Fleet, Hampshire GU13
8UY, UNITED KINGDOM
☎ 0252 - 816181

Roland(U.K.) Ltd.,
Swansea Office
Atlantic Close, Swansea
Enterprise Park, Swansea,
West Glamorgan SA79FJ,
UNITED KINGDOM
☎ (0792)700 - 139

ITALY

Roland Italy S. p. A.
Viale delle Industrie 8
20020 ARESE MILANO
ITALY
☎ 02 - 93581311

SPAIN

Roland Electronics
de España, S. A.
Calle Bolivia 239
08020 Barcelona, SPAIN
☎ 93 - 308 - 1000

GERMANY

Roland Elektronische
Musikinstrumente
Handelsgesellschaft mbH.
Oststrasse 96, 2000
Norderstedt, GERMANY
☎ 040/52 60 090

FRANCE

Musikengro
102 Avenue Jean-Jaures
69007 Lyon Cedex 07
FRANCE
☎ (7)858 - 54 60

Musikengro (Paris Office)
Centre Region Parisienne
41 rue Charles-Fourier,
94400 Vitry s/Seine
FRANCE
☎ (1)4680 86 62

BELGIUM/ HOLLAND/ LUXEMBOURG

Roland Benelux N. V.
Houtstraat 1
B-2260 Oevel-Westerlo
BELGIUM
☎ (0032)14 - 575811

DENMARK

Roland Scandinavia A/S
Langebrogade 6
Box 1937
DK-1023 Copenhagen K.
DENMARK
☎ 31 - 95 31 11

SWEDEN

Roland Scandinavia A/S
DanvikCenter 28 A, 2 tr.
S-131 30 Nacka
SWEDEN
☎ 08 - 702 00 20

NORWAY

Roland Scandinavia
Avd. Norge
Lilleakerveien 2
Postboks 95 Lilleaker
N-0216 Oslo 2
NORWAY
☎ 02 - 73 00 74

FINLAND

Fazer Musik Inc.
Länsituulentie
POB 169
SF-02101 Espoo
FINLAND
☎ 0 - 43 50 11

NEW ZEALAND

Roland Corporation
(NZ) Ltd.
97 Mt. Eden Road, Mt.
Eden, Auckland 3,
NEW ZEALAND
☎ (09)3098 - 715

SWITZERLAND

Musitronic AG
Gerberstrasse 5, CH-4410
Liestal, SWITZERLAND
☎ 061/921 16 15

Roland CK (Switzerland)
AG
Postfach/Hauptstrasse 21
CH-4456 Tenniken
SWITZERLAND
☎ 061/98 60 55
Repair Service by
Musitronic AG

AUSTRIA

E. Dematte & Co.
Neu-Rum Siemens-
Strasse 4
A-6021 Innsbruck Box 591
AUSTRIA
☎ (0512)63 451

GREECE

V. Dimitriadis & Co. Ltd.
2 Phidiou Str., GR 106 78
Athens, GREECE
☎ 1 - 3620130

PORTUGAL

Casa Caius Instrumentos
Musicais Lda.
Rua de Santa Catarina 131
Porto, PORTUGAL
☎ 02 - 38 44 56

HUNGARY

Intermusica Ltd.
Warehouse Area 'DEPO'
Torokbalint, Budapest
HUNGARY
☎ (1)1868905

ISRAEL

D.J.A. International Ltd.
25 Pinsker St., Tel Aviv
ISRAEL
☎ 972 - 3 - 5283015

CYPRUS

Radex Sound Equipment
Ltd.
17 Panteli Katelari Str.
P.O.Box 2046, Nicosia
CYPRUS
☎ 453426, 466423

TURKEY

Barkat Sanayi ve Ticaret
Siraselviler Cad. 86/6
Taksim Istanbul, TURKEY
☎ 149 93 24

EGYPT

Al Fanny Trading Office
9, Ebn Hagar Askalany
Street, Ard El Golf,
Heliopolis, Cairo, EGYPT
☎ 2917803 - 665918

BRAZIL

Roland Brasil Ltda.
R. Alvarenga 591
CEP-05509 Sao Paulo
BRAZIL
☎ (011)813 - 7967
Repair Service for Roland
and Rhodes products

Oliver do Brasil S.A.
Instrumentos Musicais
Av. Ceci. No.578 Centro
Empresarial Tambore
Barueri SP CEP 06400
BRAZIL
☎ (011)709 - 1267
Repair Service for BOSS
products

MEXICO

Case Veerkamp, s.a. de c.v.
Mesones No. 21
Col. Centro
C.P. 06080 Mexico, D.F.
MEXICO
☎ (5)709 - 3716

La Casa Wagner de
Guadalajara s.a. de c.v.
Av. Corona No. 202 S.J.
C.P.44100
Guadalajara, Jalisco
MEXICO
☎ (36)13 - 1414

ARGENTINA

Netto S.A.
Venezuela 1433
1095 Buenos Aires
ARGENTINA
☎ 37 - 1632

HONG KONG

Tom Lee Music Co., Ltd
Service Division
22-32 Pun Shan Street,
Tsuen Wan, New
Territories, HONG KONG
☎ 415 - 0911

KOREA

Cosmos Corporation
Service Station
261 2nd Floor Nak-Won
arcade
Jong-Ro ku, Seoul, KOREA
☎ (02) 742 8844

SINGAPORE

Swee Lee Company
Bras Basah Complex
#03-23 Singapore 0178
SINGAPORE
☎ 3367886

THAILAND

Theera Music Co., Ltd.
330 Vergn Nakorn Kasem,
Soi 2, Bangkok 10100,
THAILAND
☎ 2248821

MALAYSIA

Syarikat Bentley
No.142, Jalan Bukit
Bintang 55100 Kuala
Lumpur, MALAYSIA
☎ 2421288

INDONESIA

PT Galestra Inti
Kompleks Perkantoran
Duta Merlin Blok C/59
Jl. Gajah mada No.3-5
Jakarta 10130
INDONESIA
☎ (021) 354604, 354606

TAIWAN

Siruba Enterprise(Taiwan)
Co., LTD.
Room. 5, 9fl. No. 112
Chung Shan N.Road Sec.2
Taipei, TAIWAN, R.O.C.
☎ (02)5364546

SOUTH AFRICA

That Other Music
Shop(PTY) LTD.
256 Bree Street,
Johannesburg 2001
Republic of South Africa
☎ 337 - 6573

Paul Bothner(PTY) LTD.
17 Werdmuller Centre
Claremont 7700
Republic of South Africa
☎ 021 - 64 - 4030

 Roland®

10993

UPC 10993



 **BOSS**