

# BOSS


## PH-1R Phaser

### INSTRUCTIONS



• Please read these instructions carefully for proper operating procedures for the BOSS PH-1R.

## NAME AND FUNCTIONS

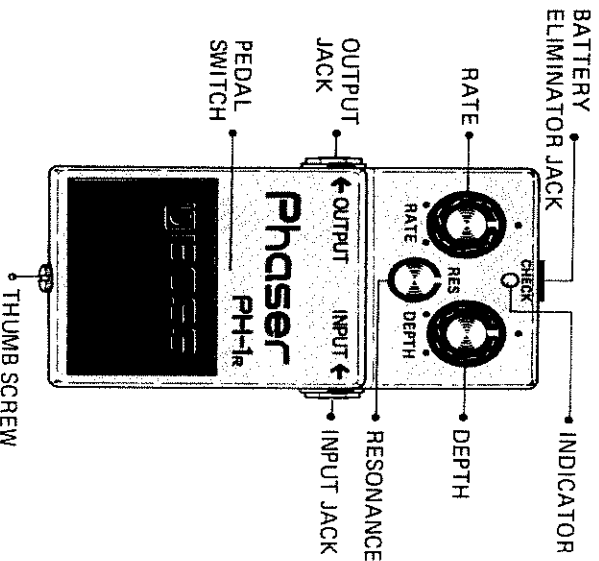

The Boss Phaser PH-1R is a high quality effect circuit designed for studio and Live performance use. The advanced Roland design produces a clean, Low-Noise natural phasing effect, and the RESONANCE control allows the performer to ultra fast sweeping effects and the RESONANCE control allows the performer to emphasize the phasing effect. The LED light indicates whether the PH-1R is in the EFFECT or NORMAL Mode.

### RATE

This knob controls speed of phase effect. At fully clockwise (☉) position, a phase effect of high speed, 100ms, is attained and at fully counterclockwise (☿) position, very low speed, 16s, phase is effected.

### DEPTH

This knob controls depth of phase effect. Turn clockwise (☉) for deeper effect and counterclockwise (☿) for shallower effect.

### RESONANCE

By means of this control, feed back can be induced in circuit to accent the phase shift effect. Turn clockwise (☉) to intensify phase effect and counterclockwise (☿) to decrease.

### INPUT JACK

The unit is powered-on by plug-in to the input jack. Keep the plug out from the jack when not in use.

### OUTPUT JACK

The PH-1R's low impedance output to the amplifiers is offered to ensure low noise and hum.

### BATTERY ELIMINATOR JACK

The BOSS AC Adaptor is connected to the Battery Eliminator jack when battery operation is not necessarily the most desirable situation.

### INDICATOR

By the LED indicator you can see whether the unit is on or off, even in the darkest on-stage situation. This indicator also allows you to check the battery. When the time comes to replace the battery, the indicator fails to light or becomes dimmer.

### PEDAL SWITCH

In our unique FET switching system there are no mechanical contacts in the signal system so it won't make an audible click, and it can't make a pop. The switching totally electronically and therefore, clearly.

### THUMB SCREW


The battery sits in a special compartment under footswitch plate that activates the silent switch. When the time comes to replace the battery, you don't even need tools.

\*Do not remove off the screw from the unit.

**BEFORE USING PH-1R**

- When operating PH-1R from AC line, use BOSS AC Adaptor for PH-1R.
- Avoid using PH-1R in very dusty location or under high temperature or humidity conditions.


**CONNECTING PH-1R**

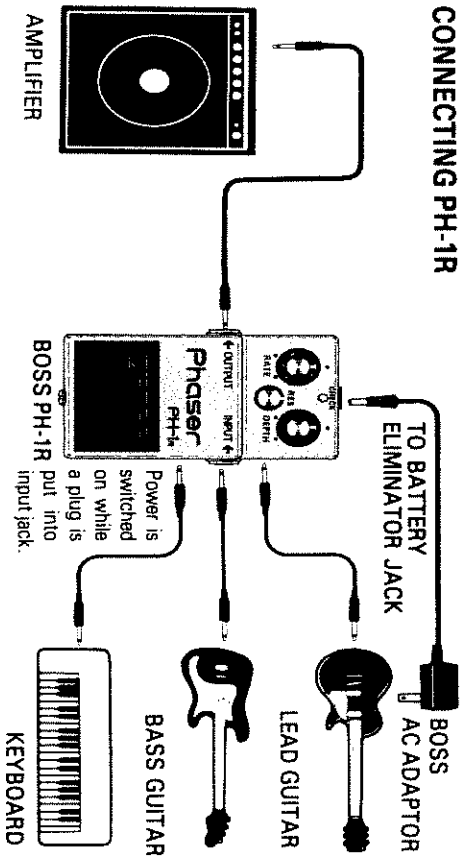


Unplug this unit when it is not to be used. Be sure to take off connecting plug from Input jack.

**OPERATING PH-1R**


1 After connecting all cords required, set all knobs on the panel as illustrated.

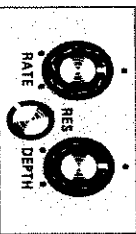

2 Depress the pedal switch. Check LED lights to indicate "EFFECT ON" and extinguishes to indicate "EFFECT OFF".  
 \*This check LED is also used to check battery. If LED fails to light or becomes dim, the battery should be replaced.



3 Turn RATE control to proper position.




4 Turn DEPTH control to proper position to obtain the depth you like.



5 Turn RESONANCE control to proper position to obtain the resonance effect.



## CAUTIONS FOR REPLACING AND HANDLING BATTERY

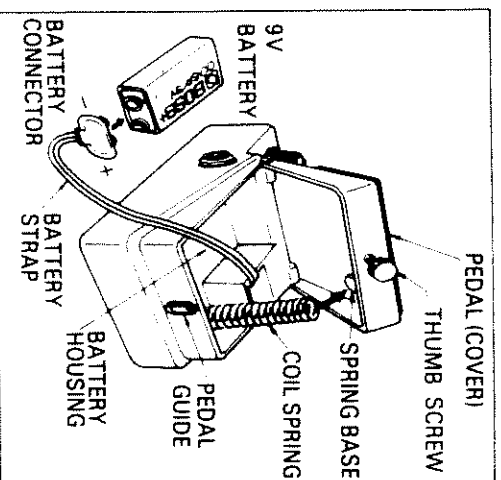


### REPLACING BATTERY USE ONE 9-VOLT BATTERY.

- Loosen the screw of pedal to open it and take out battery from its housing.
- Replace the battery by a fresh one and put it into position.
- Set coil spring onto the projection on the rear of the pedal and shut the cover (pedal). Finally, insert the screw into the pedal guide and tighten it. At this time, be careful not to catch the battery strap in the cover or coil spring.

## CAUTIONS

- When you don't use for a long period, remove the battery to prevent current leakage and leaking out of sticky substance.
- If battery voltage drops, effect becomes inferior or no sound is produced. To prevent that, replace the battery a little earlier.

## AC ADAPTOR (OPTION)

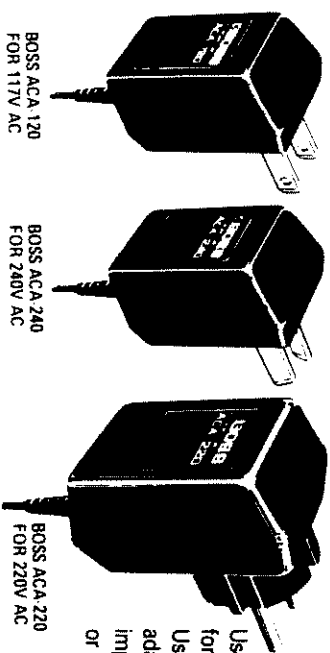

Use BOSS AC adaptor for AC operation. Use of different adaptors may cause improper operation or no sound.

- Be sure to keep the battery snapped by connector into the housing, when using AC adaptor, too.
- Even if AC Adaptor cord comes out during performance, operations immediately changes to battery, causing no trouble in continued performance.
- Power is switched on while a plug is put into input jack. When you do not use, keep the plug off the jack.

## SPECIFICATIONS

Power .....	Battery 9V (1)
	AC Adaptor
Current draw .....	11 mA at 9V
Control .....	Rate, Depth, Resonance
	Normal/Effect Changeover Switch,
Others .....	Battery Check Lamp
	(also for confirmation of Normal/Effect changeover)
Jack .....	Input, Output, AC Adaptor
Phase shift .....	4 steps, 720°
LFO Speed .....	16 sec ~ 100 msec
SN ratio .....	Over 90 dB (IHF-A)
Input impedance .....	470k $\Omega$
Output load impedance .....	Over 10k $\Omega$
Maximum input .....	-5 dBm
Gain .....	UNITY 1
Dimensions .....	70(W) x 55(H) x 125(D) mm
Weight .....	400 g

\* Specifications are subject to change without notice.



Products of Roland

Printed in Japan May '82 E-3

 Roland®

10420

UPC 10420



JAN 11

 **BOSS**