
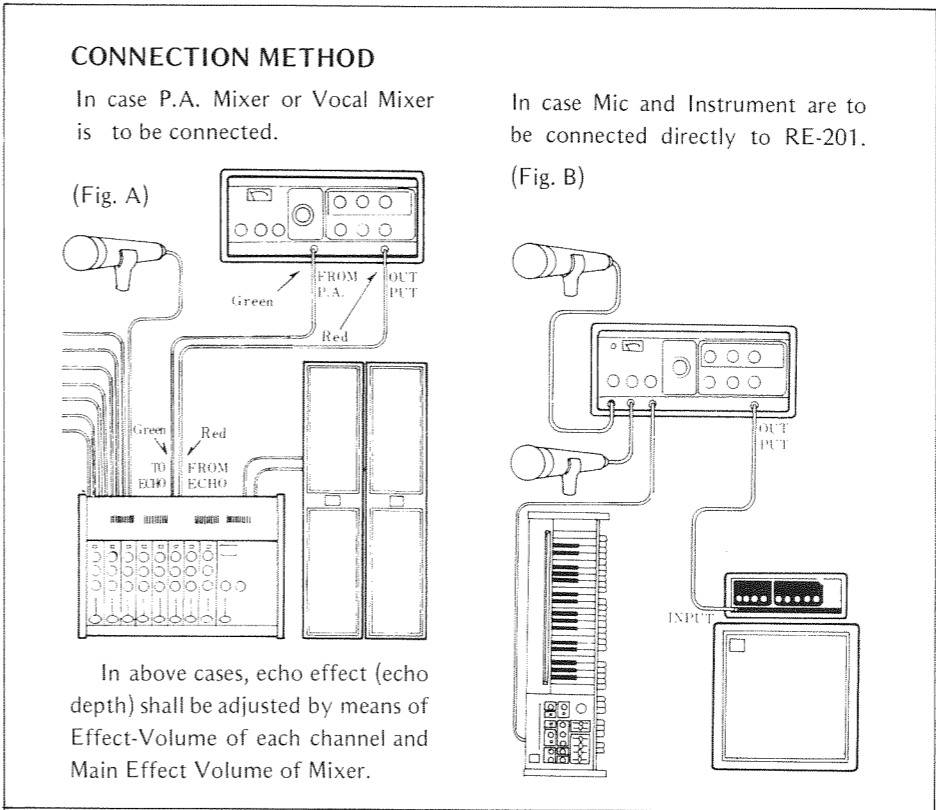


FUNCTIONS AND USES OF CONTROLS

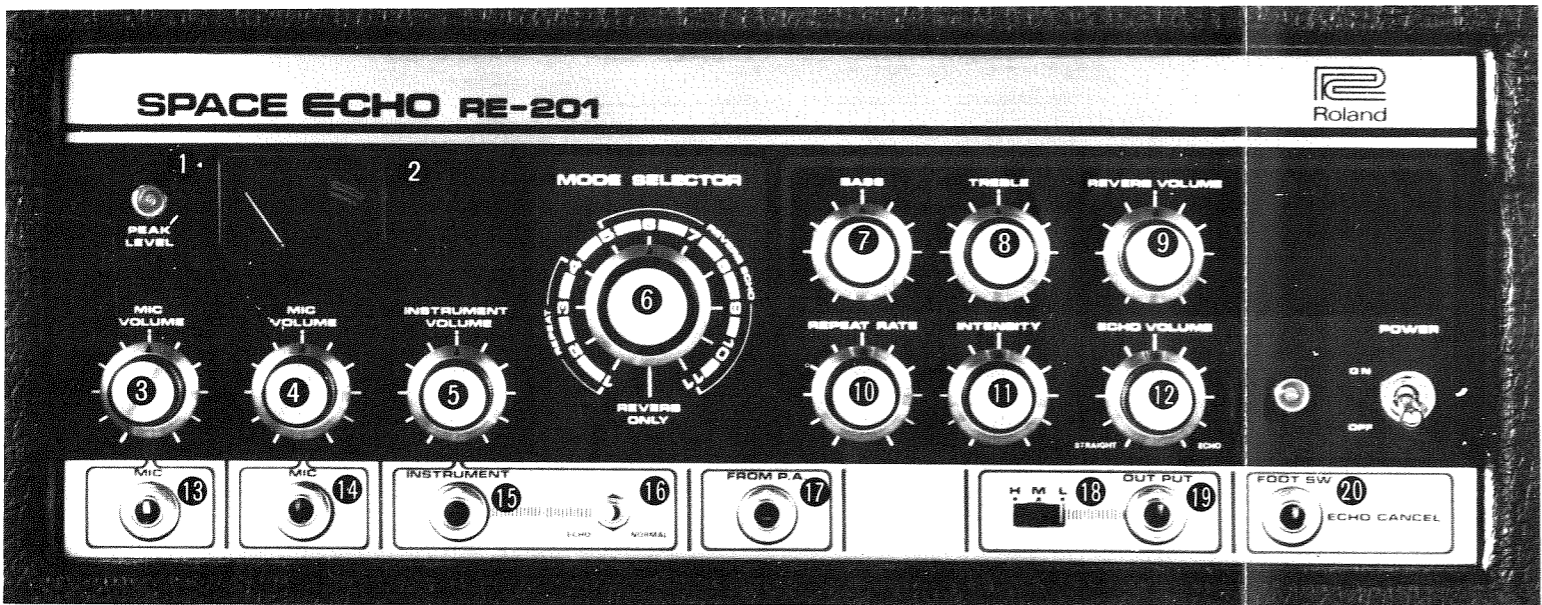

1. BASIC CONTROLS

- **VU-METER <2>**
Indicates input level. Clear, undistorted echo is obtained at a meter-reading of '0'. During actual playing, the meter should indicate an input range of '0' to '-3'.
- **PEAK LEVEL INDICATOR <1>**
Indicates input level above that which can be measured by the VU-Meter. When using high-output instruments such as an electric guitar, the pilot lamp should flicker on and off. If the indicator lights continuously, input is too high and should be lowered by adjusting volume controls.
- **MIC VOLUME/INSTRUMENT VOLUME <3><4><5>**
When microphones and/or instruments are connected directly to the echo chamber, these knobs are used to control input volume and recording volume. An independent 3-channel system allows simultaneous input from 2 microphones and 1 instrument. Knobs should be adjusted by monitoring the VU-Meter and PEAK LEVEL Indicator as described above.
- **CONNECTION EXAMPLE**
(For input adjustment when echo chamber is connected to PA or Vocal mixer.)
Adjust EFFECT CONTROL of each channel on the mixer by monitoring VU-Meter and PEAK LEVEL Indicator as described above. Use MAIN ECHO CONTROL on the mixer to adjust level of each channel in the following sequence.
1. Set MAIN ECHO CONTROL at '5'.
2. Adjust echo effect for each channel with mixer controls.

3. Set the MAIN ECHO CONTROL to the desired level by monitoring the VU-Meter and PEAK LEVEL Indicator.

2. ECHO/REVERB EFFECT AND TONE

- **MODE SELECTOR <6>**
By changing the combination and positions of the three playback heads, a total of 12 different echo variations can be obtained (4 ECHO ONLY, 7 ECHO/REVERB, 1 REVERB ONLY).

		Playback heads, Reverb are activated by MODE SELECTOR											
		REPEAT				REVERB ECHO						REVERB ONLY	
		1	2	3	4	5	6	7	8	9	10	11	
Playback Heads	1	•				•		•		•	•		
	2		•	•		•	•	•	•	•		•	
	3			•	•		•		•	•	•	•	
Reverb					•	•	•	•	•	•	•	•	

- **REPEAT RATE <10>**
This knob controls interval of effect by varying the tape speed. Normally set at its center position. Clockwise rotation decreases length of effect by shortening both the intervals and duration.
- **INTENSITY <11>**
This knob controls echo repeat level. Clockwise increases level of echo repeat. Level should be set under '6' to '7', however, since higher levels tend to cause oscillation.

- **ECHO VOLUME <12>**
This knob controls overall echo effect without altering original input settings. Clockwise increases echo effect.
- **REVERB VOLUME <9>**
This knob controls depth of reverb when MODE SELECTOR is set at '5' to '11' or 'REVERB ONLY'. Clockwise rotation deepens reverb.
- **BASS/TREBLE CONTROLS <7><8>**
These knobs control bass and treble of echo sounds without changing settings of original input.

3. CONNECTIONS

- **FROM PA INPUT <17>**
When connecting to mixer, link its TO ECHO (GREEN) to FROM PA (GREEN) of RE-201 (Fig. A).
- **MIC INPUT <13><14>**
These are used for connection of microphones (fig. B).
- **INSTRUMENT INPUT <15>**
This is used for connection of instruments (fig. B).
- **ECHO/NORMAL CHANGEOVER SWITCH <16>**
When set at ECHO position, instrument input will be channeled through the echo chamber for echo effect. At NORMAL position, instrument input is not altered. Convenient for simultaneous inputs of instrument and vocals (i.e. microphones).
- **OUTPUT <19>**
When connecting to mixer, link its FROM ECHO (RED) to OUTPUT (RED) of RE-201. When connecting

microphone or instrument directly to RE-201, link OUTPUT (RED) directly to amplifier input (Fig. B).

- **OUTPUT LEVEL CHANGEOVER SWITCH <18>**
Used to stabilize output volume of echo chamber. One of three positions L (low), M (medium) or H (high) should be selected to correspond with power of amplifier or mixer.
- **FOOT-SWITCH JACK <20>**
Used to connect FOOT-SWITCH to allow foot control of ECHO/REVERB effect. A light on the VU-Meter indicates ON.

4. STANDARD CONTROL SETTINGS

Knobs of REPEAT RATE <10>, INTENSITY <11>, ECHO VOLUME <12>, REVERB VOLUME <9>, BASS CONTROL, <7> and TREBLE CONTROL <8> are normally set at '5' and adjusted later for desired effect during playing. MIC VOLUME <3> <4> and INSTRUMENT VOLUME <5> should be adjusted by monitoring the VU-Meter and PEAK LEVEL Indicator for clear, undistorted sound. OUTPUT LEVEL CHANGEOVER SWITCH <18> is used with amplifier or mixer volume control for overall volume adjustment. When microphones are directly connected to the echo chamber, connect OUTPUT from RE-201 to FROM ECHO of mixer. If echo chamber is connected to mixer mic inputs, the OUTPUT LEVEL CHANGEOVER SWITCH should be set to 'L' or 'M'. BASS and TREBLE TONE CONTROLS <7> <8> control echo sound only and will not change tone inputs from the amplifier or mixer.

FEATURES:

- 1) Because the Roland RE201 uses a free running system (take-in and feed movement of tape oscillation is repeated by its own elastic force, to maintain appropriate length and rotation of the tape), wow and flutter are minimized and tape life is extended to more than 300 hours (approximately 6 to 15 times that of standard echo chambers) without deterioration of sound quality.
- 2) Less extraneous noise and improved balance between bass and treble result in better echo sound.
- 3) Separate 3 channel circuit consisting of 2 microphones and 1 instrument channel allows versatile mixing. Echo/Normal Changeover Switch allows canceling of the instrument echo sound, for added convenient when microphones and instrument are used simultaneously.
- 4) Since Treble and Bass knobs control only echo sound, echo sound can be adjusted freely without changing any original inputs.
Various other modification can be made by variation of the Mode Selector.
- 5) Level meter incorporates a lamp interlocking foot switch and indicates echo ON and Off.
- 6) A light emitting diode is used in the Peak Level Meter to allow measurement of sound such as those produced by electric guitars, percussion instruments, and others, which can not be indicated with conventional meters.
- 7) Due to its 3 springs Reverb Unit, natural reverberation effects can be produced.

CAUTION

- ⊙ If the RE-201 generates noise after installation, changing the location or position is indicated to correct situation.
- ⊙ Avoid prolonged use in dusty, hot or high humidity places.


SPECIFICATIONS

Input Jack	4 pcs (for Mic(2), Instrument, P.A.)
Output Jack	1 pc
Foot Switch Jack	1 pc
Control Knob	9 pcs (for Mic Volume(2), Instrument Volume, Treble, Bass, Reverb, Volume, Repeat Rate, Intensity, Echo Volume)
Control Switch	3 pcs (for Instrument Echo-cancel Switch, Output Level 3-Step Changeover, Power Switch)
Rotary 12-Way Mode Selector	1 pc
Level Meter	1 pc (incorporates lamp interlocking foot switch)
LED Indication Type Peak Level Meter	1 pc
IC	1 pc
Transistor	22 pcs
Diode	19 pcs
Reverb Unit (3 springs system)	1 pc
Supply Voltage (100V, 117V) or (230V, 250V), 50/60Hz	
Power Consumption	14VA
Dimensions	415 (W) × 275 (D) × 185 (H) mm
Weight	Lbs (9.5kg)
Accessory	Connection Cord(2), Foot Switch, Endless Tape (RT-1), Cleaner and Vinyl Cover

*For the sake of product improvement, specifications and appearances are subject to change without notice.

ECHO CHAMBER

RE SERIES MODEL RE-201

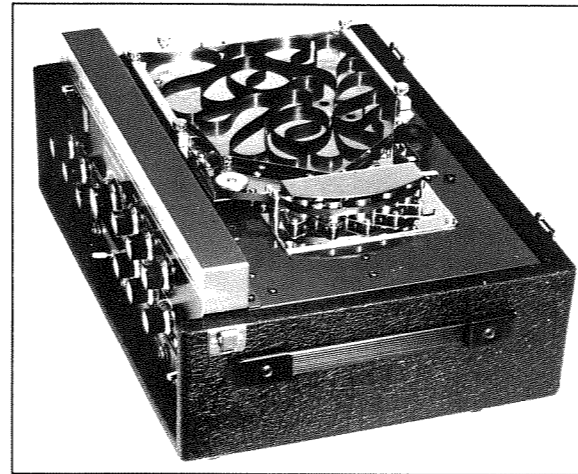

 Roland



 Roland